TRIO *Cuisine*

CUPCAKE MAKER



USER MANUAL

TCC-227

General Safety Precautions

1. Always switch off and unplug the appliance from the Mains electrical supply **BEFORE** cleaning and also when the appliance is not in used.

2. **NEVER IMMERSE THE APPLIANCE, POWER CORD OR PLUG INTO WATER OR OTHER LIQUID**. See instructions for cleaning.

3. Close supervision is needed when operating appliance near children.

4. This product must not be left unattended while it is connected to the main supply.

5. Always connect the power cord to the appliance BEFORE you plug in to the Mains electrical supply. To disconnect the appliance, switch off the Mains electrical supply before removing the plug from the appliance.

6. Do not operate appliances with damaged cord set, or plug. Any repairs should always be done by the Customer Service Centre or by an authorized service centre.

7. Do not place the appliance on or near a hot gas or electric burner, in a heated oven, or near easily flammable material.

8. Do not use in outdoor or while standing in a damp area.


9. Do not use appliance for other than its intended use. This appliance is intended for household use only.

10. Always place appliance on a flat sturdy surface. When moving appliance, always be aware not to touch the hot surface, or possible spillage of hot liquid it may contain.

11. Use of accessories or equipments not supplied by the manufacturer may cause damage or malfunctioning of your appliance or result in injuries.

12. Close supervision is needed when operating near children or infirm persons.

Parts Identification

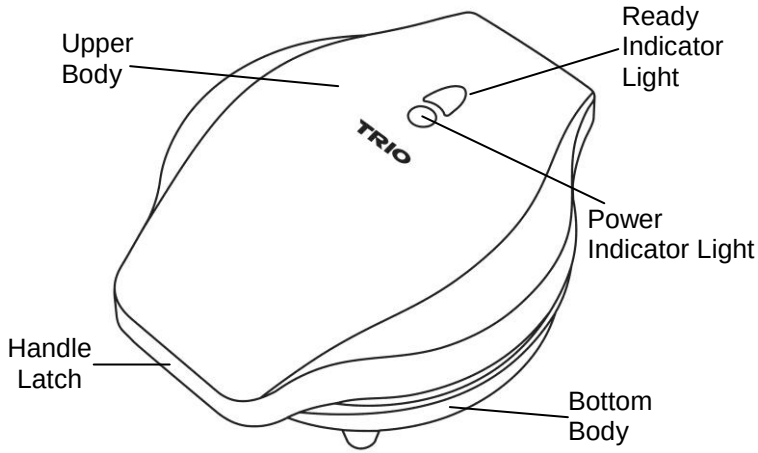

Specifications

MODEL	TCC-227
RATED VOLTAGE	220-240V~
RATED WATTAGE	700W
FREQUENCY	50Hz

Before The First Use

1) Remove all packaging materials.

2) Clean the baking plates with a damp cloth or sponge.

3) Slightly grease the baking plates with a little cooking oil.

4) Take care to prevent water from running into the appliance.

How to Use

1. Connect the plug into the wall socket. You will notice the power and ready indicator light is on, indicating that the cupcake maker is under pre-heating and will go off after 2 – 3 minutes.

2. Allow your cupcake maker to pre-heat until the ready indicator goes out. This indicates that the cooking plates have reached the correct temperature for cooking.

3. For best results, lightly spray the cooking plates with a cooking oil spray before using. This will assist in the removal of the cupcake after cooking.

4. Divide mixture into pan holes as per recipes using a jug & spoon or fabric piping bag. Note: Do not use disposable plastic piping bags as these may melt if they come into contact with hot plates.

5. Gently close the lid, ensuring the latch locks in place. Do not slam the lip down as it may cause the mixture to run off the cooking plates.

6. Allow to cook for approximately 3- 5 minutes or until golden.

7. To remove cupcake, always use a plastic or wooden spatula. Never use a sharp object or metal, as this will damage the non-stick surface of cooking plates.

8. After use, remove the plug from the wall socket.

NOTE: When your Cupcake Maker is heated for the first time, it may emit slight smoke or odor. This is normal with many heating appliances. This does not affect the safety of your appliance

Care and Cleaning

- After use and before cleaning remove plug and wait for toaster to cool.
- Wipe the inside and the edges of the plate with a soft cloth.
- Should any filling be difficult to remove, pour a small amount of cooking oil onto the plate and wipe off after 5 minutes when the food has softened.
- Wipe the outside with only a slightly damp cloth ensuring that no oil or grease enters the heating slots.
- Do not clean the inside or outside with any abrasive scouring pad or steel wool as this will damage the finish.

Correct Disposal of this product	
	This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

TRIO

Cuisine

