TRIO *Cuisine*

EGG ROLLS MAKER



USER MANUAL

TEM-204

General Safety Precautions

1. Always switch off and unplug the appliance from the Main electrical supply before cleaning and when not in use.

2. Do not touch hot surface. Please use handles .

3. To protect against electric shocks, never immerse the appliance, cord into water or any other liquids.

4. This product must not be left unattended while it is connected to the main supply.

5. Do not use appliance for other than its intended use.

6. Close supervision is necessary when any appliance is used by or near children.

7. Do not operate appliances with damaged cord set or plug. Any repairs should always be done by an experienced technician or by an authorized service center.

8. Do not let power cord hang over sharp edges of a table or counter or touch hot surfaces.

9. Unplug from outlet when not in use. Allow appliance to cool before putting on or taking off parts and before cleaning the appliance.


10. Do not use the appliance outdoors.

11. The surface of the appliance is hot when in use. Always use an oven glove when touching the surface or metal parts.


12. Do not operate unless cooking plates are properly installed in to both housings.

13. Do not place the appliance on or near a hot gas, or electric burner in a heated oven or near easily flammable material.

Parts Identification

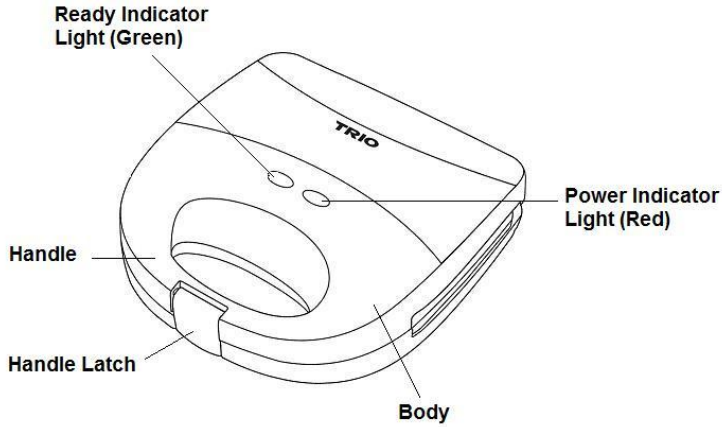

Egg Roll Plate

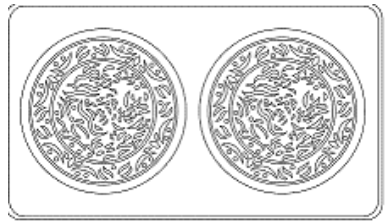

Specifications

MODEL	**TEM-204**
RATED VOLTAGE	220-240V~
RATED WATTAGE	700-800W
FREQUENCY	50/60Hz

Egg Rolls Recipes

(Change the quantity according to you taste)

Flour	100g
Sugar Powder	200g
Coconut Milk	100ml
Water	150ml
Egg	5 pcs

How to Use

1. Using for the first time use: Wipe it with a damp cloth. Lightly grease the baking surfaces with butter, margarine or cooking fat. (Do not eat the first piece of egg roll toast you make).

2. Fit the plug into the wall socket. The Red power indicator light will illuminate.

3. Pre-heat the egg rolls maker. The optimum temperature is reached when the green indicator light illuminates. It is now ready for use.

4. Fully open the appliance. Fill of the egg roll plate with the mixture ingredients and close the appliance by using the handle latch.

5. About 2 minutes, take it out and roll it with a round stick.


6. Remove the egg rolls using plastic or wooden spatula. Never use a metal knife as this may damage the non-stick coating.

7. When cooking has completed, turn the mains power supply off.

8. After use, remove the plug from the wall socket.

Care and Cleaning

- Allow the egg rolls maker to cool down completely.
- Wipe the plates with warm soapy water, and dry well before storage.
- Any stubborn particles should be removed with plastic scrubbing pad. Finish off with a damp cloth and wipe the plates dry.
- Do not use abrasive chemicals, Steel wool or harsh scouring or abrasive pads on the inside or outside of the unit as this will damage the finish.

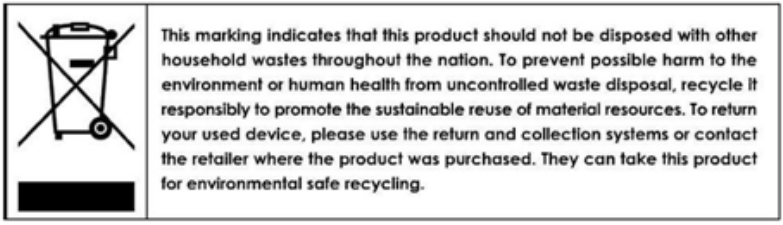

This marking indicates that this product should not be disposed with other household wastes throughout the nation. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

TRIO

Cuisine

