
TRIO® *Cuisine*

EGG WAFFLE MAKER

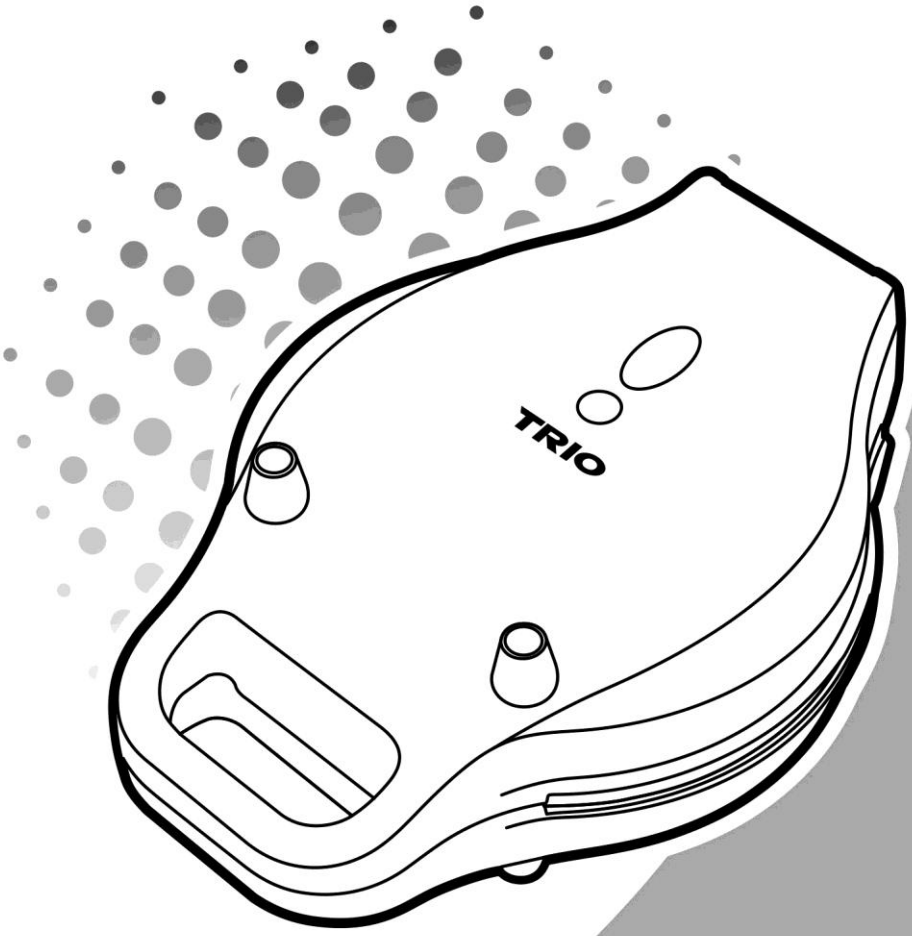

USER MANUAL

TEW-230

General Safety Precautions

1. Always switch off and unplug the appliance from the Mains electrical supply **BEFORE** cleaning and also when the appliance is not in used.

2. **NEVER IMMERSE THE APPLIANCE, POWER CORD OR PLUG INTO WATER OR OTHER LIQUID**. See instructions for cleaning.

3. Close supervision is needed when operating appliance near children or infirm person.

4. This product must not be left unattended while it is connected to the main supply.

5. Always connect the power cord to the appliance BEFORE you plug in to the Mains electrical supply. To disconnect the appliance, switch off the Mains electrical supply before removing the plug from the appliance.

6. Do not operate appliances with damaged cord set, or plug. Any repairs should always be done by the customer service centre or by an authorized service centre.

7. Do not place the appliance on or near a hot gas or electric burner, in a heated oven, or near easily flammable material.


8. Do not use in outdoor or while standing in a damp area.

9. Do not use appliance for other than its intended use. This appliance is intended for household use only.

10. Always place appliance on a flat sturdy surface. When moving appliance, always be aware not to touch the hot surface, or possible spillage of hot liquid it may contain.

11. Use of accessories or equipments not supplied by the manufacturer may cause damage or malfunctioning of your appliance or result in injuries.

Parts Identification

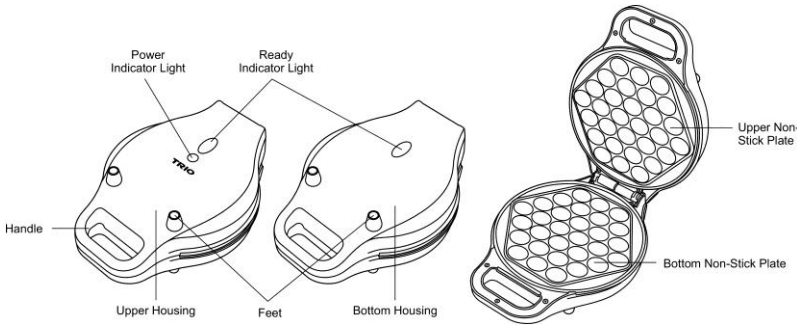

Specifications

MODEL	TEW-230
RATED VOLTAGE	220-240V~
RATED WATTAGE	700W
FREQUENCY	50/60Hz

Before The First Use

1) Remove all packaging materials.

2) Clean the non-stick plates with a damp cloth or sponge.

3) Slightly grease the non-stick plates with a little cooking oil.

4) Take care to prevent water from running into the appliance.

How to Use

1. Connect the plug into the wall socket, you will notice that the ready indicator light will go on, indicating that the egg waffle maker has begun preheating.

2. Allow your egg waffle maker to pre-heat until the ready indicator light goes out. This indicates that the non-stick plates have reached the correct temperature for cooking.

3. For best results, lightly spray the non-stick plates with a cooking oil spray before using. This will assist in the removal of the egg waffle after cooking.

4. Divide mixture into pan holes as per recipes using a jug & spoon or fabric piping bag. Note: Do not use disposable plastic piping bags as these may melt if they come into contact with hot non-stick plates.

5. Gently close the lid, hold the handle and flipping the egg waffle maker 180 degrees top and bottom for even baking.

6. Allow to cook for approximately 3- 5 minutes or until golden.

7. To remove egg waffle, always use a plastic or wooden spatula. Never use a sharp object or metal, as this will damage the non-stick surface of cooking plates.

8. After use, remove the plug from the wall socket.

NOTE: When your egg waffle maker is heated for the first time, it may emit slight smoke or odor. This is normal with many heating appliances. This does not affect the safety of your appliance

Egg Waffle Recipe (For reference only)

Ingredients

A. 4 eggs
   140g fine sugar

B. 150g Low gluten flour
   50g Corn flour
   10g Baking powder
   30g Corn oil
   150g Milk

Methods

1. Whisk ingredient A till sugar dissolved


2. Mix well ingredient B.

3. Combine ingredient A and B and filtered. Allow resting for 1 hour.

4. Spoon the batter into egg waffle maker moulds, close lid and bake for 3-5 minutes until golden.

Care and Cleaning

- Always disconnect the appliance from the power supply before cleaning.
- Always allow your appliance to cool completely before cleaning.
- Never immerse the appliance completely in water or any other liquids.
- Wipe the inside and the edges of the plate with a soft cloth.
- Should any filling be difficult to remove, pour a small amount of cooking oil onto the plate and wipe off after 5 minutes when the food has softened.
- Do not clean the inside or outside with any abrasive scouring pad or steel wool as this will damage the finish.
- Dry thoroughly before next use.

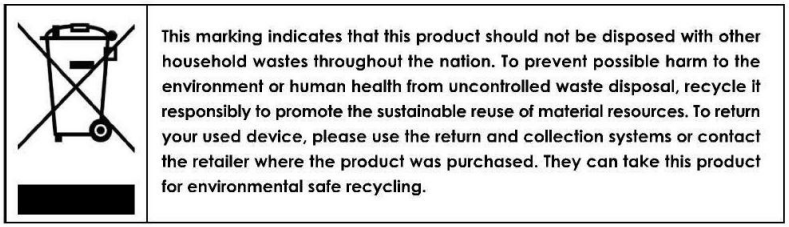

This marking indicates that this product should not be disposed with other household wastes throughout the nation. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

TRIO®

Cuisine

