
TRIO *Cuisine*

MINI CHOPPER

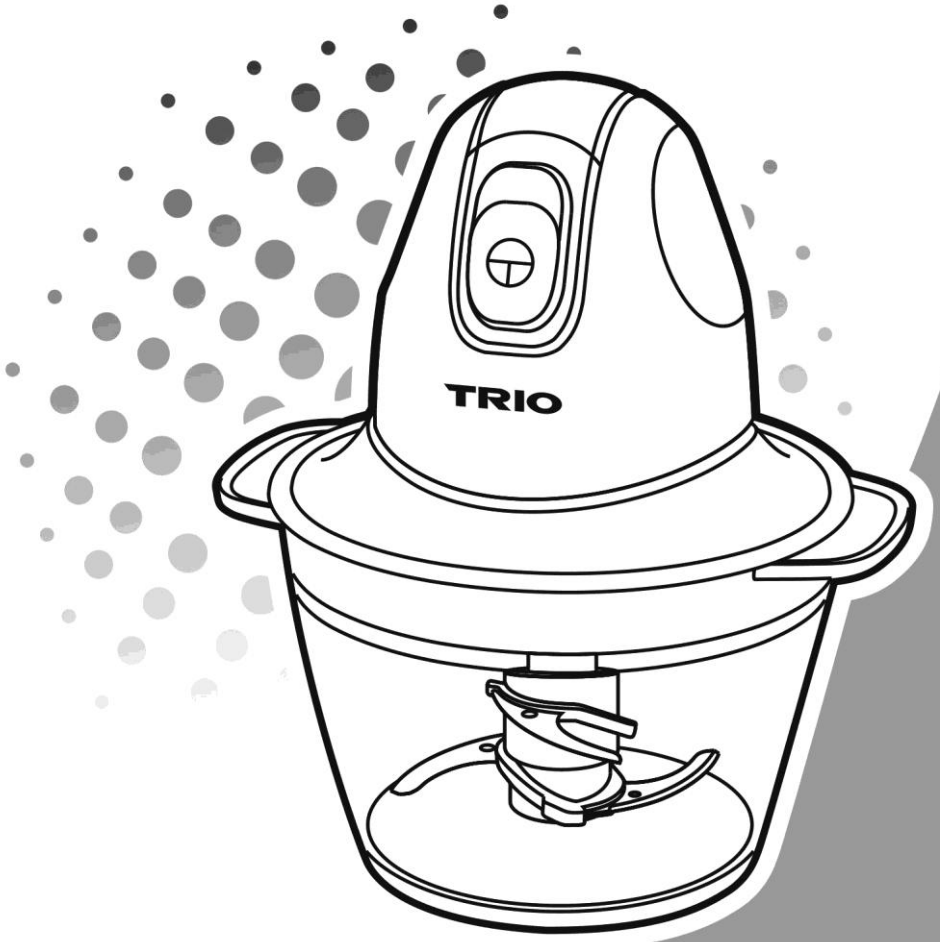

USER MANUAL


TFC-355

General Safety Precautions

1. Read this instruction manual carefully before using the appliance for the first time. Keep this user manual for future reference.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
3. Do not open until blades stop.
4. Be sure motor unit is locked securely in place before operating appliance.
5. Do not attempt to defeat the lid interlock mechanism.
6. Use of accessories or equipment not supplied by the manufacturer may cause damage or result in the malfunctioning of your appliance or bodily injuries.
7. This appliance is intended for indoor and household use only; not for outdoor, commercial and industrial use.
8. Keep the appliance and its power cord out of reach of children. Children should be supervised to ensure that they do not play with the appliance.
9. To protect against fire, electric shock and injury, do not immerse power cord, plug or appliance in water or other types of liquid.
10. Ensure the voltage indicated on the Rating Label corresponding to the local power supply.
11. Do not leave the appliance operating unattended for any extended period of time.
12. Always place the appliance on a flat, level and dry surface.
13. The appliance must be switched off and mains plug removed from wall socket each time after use, and before cleaning and maintenance.

14. When overheating occurs, the circuit breaker will be activated and the power will be cut off. The circuit breaker will be activated for normal use again when temperature of electric motor drops to a low temperature.

Parts Identification

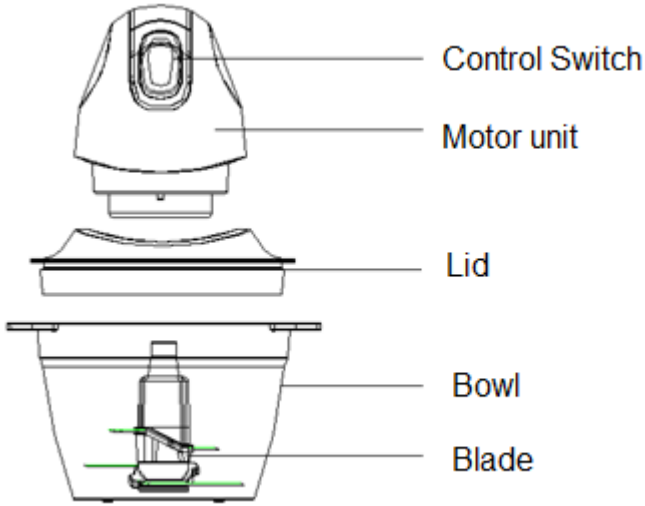

Specifications

Model	TFC-355
Rated Voltage	220-240V
Rated Power	300W
Frequency	50/60Hz
Capacity	1.0L

Before The First Use

Before using this appliance for the first time, wash the bowl and blade assembly in sudsy water and dry thoroughly, all of these parts are safe in dishwasher, wipe the motor unit with a damp cloth, do not immerse the motor unit in water.

How to Chop or Mince Food

1. Place the bowl on a counter or other flat surface, then slide the blade down over the shaft in the bowl. Be careful not to touch the blade as it is extremely sharp.
2. Place dry food in the bowl, the desired food refers to the chopping guide.
3. Position the motor unit onto the bowl, lining up the motor unit locking tabs to the bowl locking slots till the motor unit locks.
4. Note: For your protection, this unit has a lid locking system, the unit will not operate unless the tabs in the motor unit and slots in the bowl align. Do not attempt to operate the unit without locking the motor unit in place.
5. Depress and hold the pulse button to process.
6. Note: This product has a “pulse action” feature. Avoid running the motor continuously in this mode for period over 1minutes. the longer the continuous pulse, the finer the texture. For coarsely chopped foods, use short pulses.
7. Be sure the blade stops rotating completely before removing the motor unit. Unplug the unit. Remove the motor unit and grasp the plastic blade hub. carefully pull the blade assembly out. Remove the bowl and empty the processed food. Do not use bowl for storing food.

Assembling or Disassembling operation instructions

1. Assembling method

A. S-shape blade holder 1 (Fig.1)
B. S-shape blade holder 2 (Fig.2)
C. Assemble the S-shape blade holder 2 (Fig. 2) onto the S-shape blade holder 1 (Fig. 1):

Grasp the middle part (with cut-resistant handle) of S-shape blade holder 1 (Fig.1) with finger and then grasp the top part of S-shape blade holder 2 with finger and push it downwards, after it, S-shape blade holder 2 will fall down freely to the right position (Fig.3 & Fig.4).

Note: Please follow the operating instruction to avoid the finger being hurt.

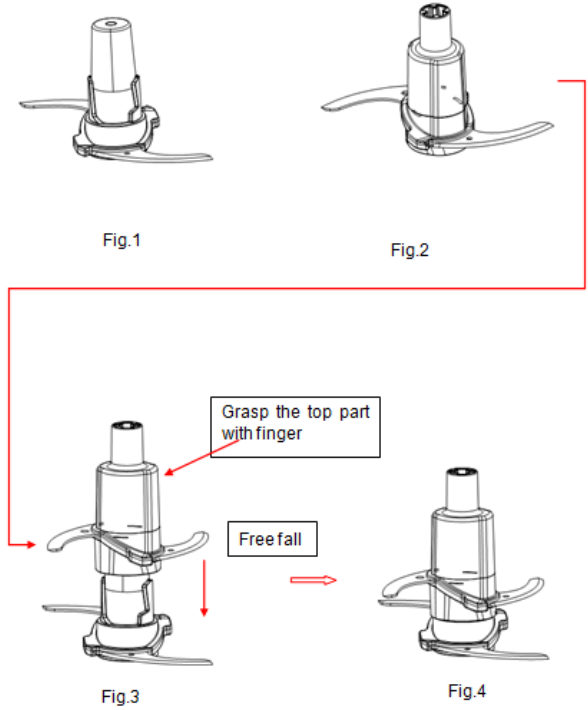


Fig.1 Fig.2

Fig.3 Fig.4

2. Disassembling method

Disassemble the S-shape blade holder 2 (Fig.2) from the component shown in Fig.4:

Firstly, grasp the middle part (with cut-resistant handle) of S-shape blade holder 1 (Fig.1) with finger and then grasp the top part of S-shape blade holder 2 with finger (Fig.4) and then remove it upwards (Fig.3).

Note: Please follow the operating instruction to avoid the finger being hurt.

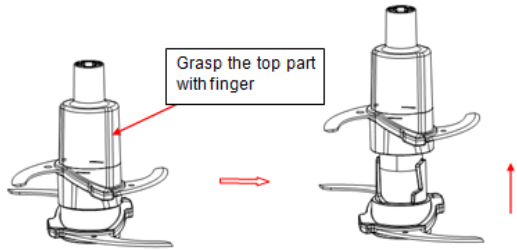


Fig.4 Fig.3

Care and Cleaning

- Always unplug the appliance before cleaning.
- The motor unit must only be wiped with a damp cloth. Never place it in a dishwasher, immerse in water or place it under running water.
- The bowl**,** the blade and the lid can be washed under running water or in the dishwasher.
- Gently wipe the appliance and parts with a dry cloth. Do not use abrasive creams, steel wool or scouring pads. Store it in a dry place.

- **WARNING:** BLADES ARE SHARP. EXERCISE CAUTION WHEN CLEANING.

CHOPPING GUIDE

Note: Use the below chart as reference only.

Ingredients	Maximum Quantity	Maximum Time
Parsley	130g	15secs
Onion/ Shallots	200g	15secs
Garlic	150g	15secs
Bread crumbs	20g	15secs
Almonds/ Hazelnut	20g	15secs
Cheese	200g	15secs
Boiled egg/Potatoes	200g	15secs
Ham	200g	15secs
Meat	150-200g	15secs
Dried apricots	120g	10secs



This marking indicates that this product should not be disposed with other household wastes throughout the nation. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

TRIO

Cuisine

