TRIO® Cuisine

# GLASS KETTLE



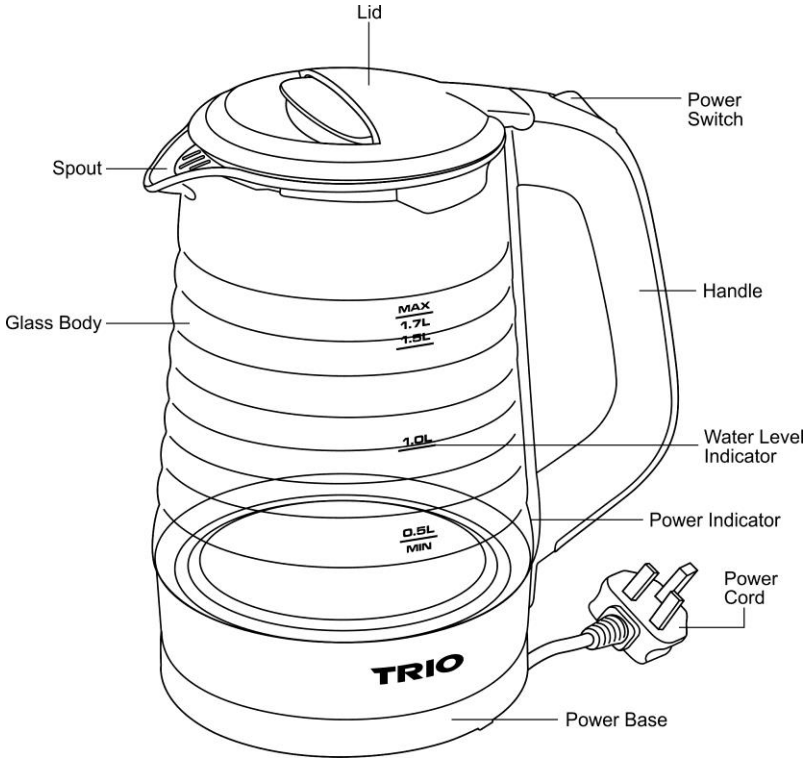

**USER** MANUAL

**TGK-617**

## General Safety Precautions

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
2. This appliance is intended for indoor and household use only; not for outdoor, commercial and industrial use.
3. Keep the appliance and its power cord out of reach of children. Children should be supervised to ensure that they do not play with the appliance.
4. Do not uses or place the appliance on sink, on hot surface, near heat source, or near the edge of table or counter.
5. To protect against fire, electric shock and injury, do not immerse power cord, plug or appliance in water or other types of liquid.
6. Ensure the voltage indicated on the Rating Label corresponding to the local power supply.
7. Do not leave the appliance operating unattended for any extended period of time.
8. Always place the appliance on a flat, level and dry surface.
9. Warning: Do not open the lid while the water is boiling, or immediately after the water is boiled. Failure to do so may lead to injury due to sudden ejection of steam.
10. Caution: Do not exceed the maximum filing volume as indicated on the appliance, as there is risk of boiling water splashing out, which may cause scalding or burn.
11. The kettle is only used for boiling water. Never use the kettle to boil any other liquids.
12. The appliance must be switched off and mains plug removed from wall socket each time after use, and before cleaning and maintenance.

## Parts Identification




## Specifications

| | |
|---|---|
| Model | TGK-617 |
| Rated Voltage | 220-240V |
| Rated Power | 1850-2200W |
| Frequency | 50-60Hz |
| Capacity | 1.7L |

## Before The First Use

**Before using**

- Please read these instructions carefully before using this appliance and keep them for future reference.
- Ensure that the local mains voltage is same as stated on the appliance.
- Never use the appliance near to the sink, bathtub, shower or any other places that may contain water.
- Remove any protective films or stickers from the appliance before using it for the first time.
- Boil and discard the water at least twice without adding any chemicals or other additives.
- Ensure that the power switch is in the OFF position before plugging the appliance to the power socket.

## How to Use

- Fill the kettle with water as required. You may refer to the water level indicator as reference. Do not fill water exceeding the “MAX” mark or below the “MIN” mark.
- Position the kettle on the power base unit and connect to the mains electricity.
- Press the power switch to start operating. The boiling indicator light will be illuminated.
- You may interrupt the boiling process at any time by pressing down the switch to switch off the power.
- The kettle switches off automatically when the water is boiled. The boiling indicator light will also turn OFF.
- Disconnect the kettle from the mains electricity.
- Do not open the lid whilst pouring as the hot steam or hot water may splash on your hand.

- Allow the kettle to cool down for 15-20 seconds before starting another boiling process.
- Note: This appliance comes with a safety function where it will automatically switch off the power when the appliance is inadvertently switched on when it is empty or dry boil. In this case, let the appliance to cool down completely, before filling water again.

## Care and Cleaning

Before commencing to clean the kettle, ensure that the mains power is switched OFF and the power cord is removed from the appliance. Wait until the appliance is at room temperature before commencing to clean it.

- Never immerse the appliance into water, or allow moisture to contact with it.
- Clean the exterior surfaces with a soft damp cloth. Never use any chemical or abrasive solution to clean the jug kettle.
- To clean the interior of kettle, use a food–grade descales such as citric acid.

### Descale with lemon (citric acid)

1. Pour approx 2-3g lemon (citric) acid into the kettle.
2. Add cold water to the MAX mark.
3. Press the power switch to start boiling. The kettle switches off automatically when the water is boiled.
4. Disconnect the kettle from the mains electricity.
5. Do not open the lid while pouring as the hot steam or hot water may splash onto your hand.
6. Boil and discard the water at least twice. This is to remove the acidic lemon smell.



**This marking indicates that this product should not be disposed with other household wastes throughout the nation. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.**

TRIO®

Cuisine

