
TRIO® Plancher


HANDY VACUUM CLEANER

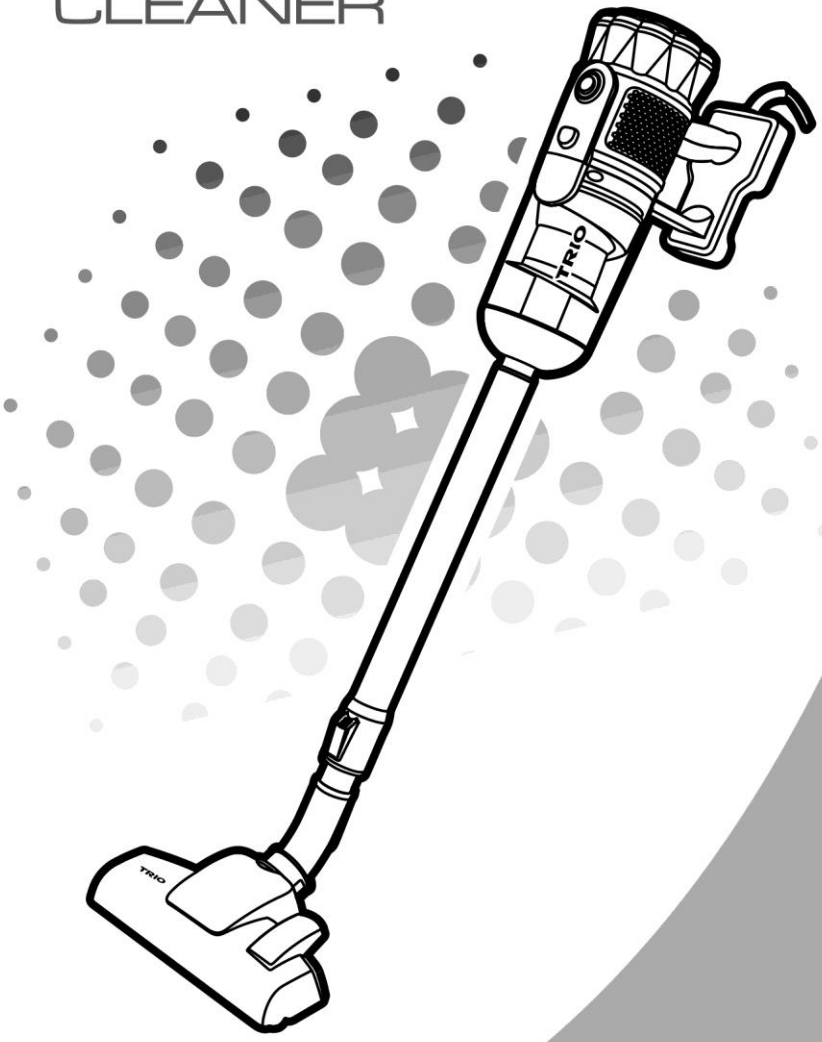

USER MANUAL

THC-560

Parts Identification

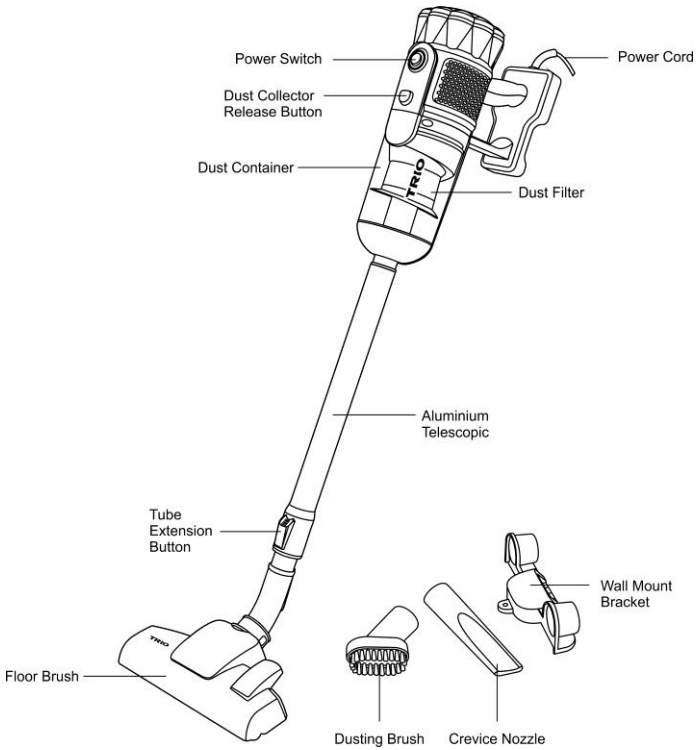

Specifications

Model	**THC-560**
Rated Voltage	**220-240V~**
Frequency	**50-60Hz**
Rated Wattage	**600W**

General Safety Precautions

1. Please read these instructions carefully before operating and keep it for future reference.
2. This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by person responsible for their safety.
3. Always switch off and unplug the appliance from the mains electricity supply BEFORE cleaning and also when the appliance is not in use.
4. Never immerse the appliance, cord or plug into water or any other liquid to avoid damage and other hazards.
5. Close supervision is necessary when appliance is used by or near children.
6. Ensure the electrical cord does not hang over the work surface.
7. Do not leave appliance unattended when plugged in. Switch off the mains electricity supply when appliance is not in use.
8. Do not operate the appliance with a damaged cord set, or plug. Any repairs should always be carried out by the Customer Service Centre or by an authorized service centre.
9. Do not place the appliance on or near a hot gas or electric burner, in a heated oven, or near easily flammable material.
10. Do not use outdoors or while standing in a damp area.
11. Do not use appliance for other than intended use. This appliance is intended for household use only.
12. Always place appliance on a flat sturdy surface. When moving appliance, always take precaution not to touch hot surfaces.
13. Use of accessories or equipments not supplied by the manufacturer may cause damage or result in the malfunctioning of your appliance or bodily injuries.
14. Children being supervised not to play with the appliance.
15. Only authorized service personnel allowed to undertake repairs on electrical appliances. Repairs undertaken by unauthorized persons may result in damage to the appliance and/or accidents or injury to the user.

16. Never vacuum water, wet objects, liquids, ashes, hot coals, cigarette butts, matches or any hot, smoking or burning objects.

17. Do not vacuum flammable or combustible materials (e.g. lighter fluid, petrol, kerosene, etc) or use in the presence of explosive liquids or vapour.

18. Due to fire and explosion risk, never vacuum toner (used in laser printer, copy machines, etc).

19. To prevent blocked filters, do not vacuum plaster and cement.

20. To prevent damage to the appliance, do not vacuum sharp and hard objects such as glass, pins, screws, etc.

21. In order to protect the motor from damage through overheating, do not operate the appliance if the air inlet and/or outlet vent are blocked.


22. Use only original accessories supplied.

How to Assemble the Handy Vacuum Cleaner

ASSEMBLY INSTRUCTION
This product can't stand itself, please apply body part onto holder which is on the connection tube

Assembling the Telescopic tube

1. Fix the floor brush on the other end of the Aluminum Telescopic tube.
2. Connect the end of Telescopic tube into the air intake socket onto the main body.

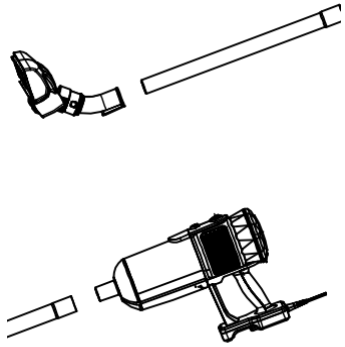


Assembling the Accessories
Cleaning accessories for different tasks:

Dual-Purpose Floor Brush:
- Bristles extended- For cleaning hard floors.
- Bristles retracted- For cleaning carpets.

Crevice Nozzle:
- Use for sofa crevices, furniture edges and corners of wall.

Dusting Brush:
- Use for sofa, bookshelf, clothing, furniture and curtains.

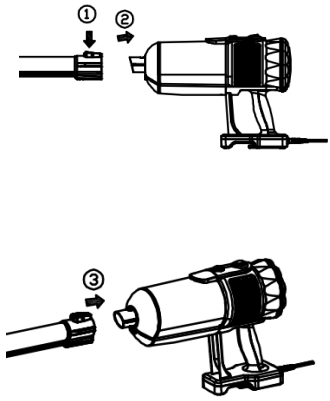

How to Use the Handy Vacuum Cleaner

1. Connect the Telescopic tube into air inlet and fit either the floor brush, crevice nozzle or dusting brush to the other end of the tube. The floor brush, crevice nozzle and dusting brush can also be fitted directly to the air inlet.

2. Once required accessories are assembled, insert the power plug into power outlet.

3. Press the power switch located on the top of vacuum cleaner to switch it on.

4. To switch off the vacuum cleaner, simply press the power switch.

5. After using, unplug from power outlet.

Care and Cleaning

1. Always unplug the appliance after use and allow the appliance to cool down completely.




2. Hold the appliance and press down the dust collector release button to release the dirt & dust.

3. Wipe the exterior surfaces and internal with a damp cloth. Do not flush the whole appliance with water.

4. Do not use abrasive sponge, scouring pads or stiff brush to clean the appliance.

5. Do not clean with abrasive cleaning agents such as detergent, gasoline or turpentine.

6. To maximize the cleaning performance, it's suggested to clean the filtration system after every 4-6 times of using.

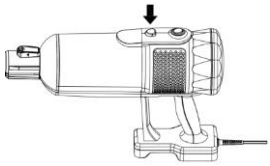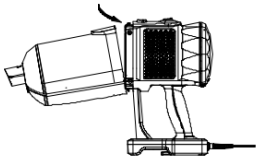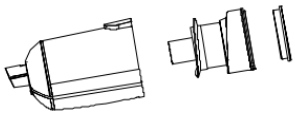Clean the Dustbin System ➢ Hold the appliance and press down the dust collector release button.	
➢ Remove the dust container from the main body to release the dirt & dust.	
➢ Separate the dust filter and clean with a soft bristled brush and rise with water. Using a hard bristled brush to clean the filters will result in damage to the filters. **Assemble back all parts *Wrong assembly reduces the suction and even damage the motor.** **Attention：** Dust filter and/or cotton filter can be washed directly by water. Wait it gets completely dry before assembly back. **Warning: Do not use product without filter.**	

Problem	Possible causes	Solving
No suction or weak suction	• Dustbin full of dust. • Improper assembly of filtration set. • Dust blocked the filter.	• Clean the dust. • Re-assemble the filtration set. • Clean or change the filter.
Nozzle roller does not rotate	• Roller blocked, protection function works.	• Clean the nozzle.
WARNING: FOR SOLVING OTHER PROBLEMS OR REPLACEMENT, PLEASE ALWAYS RESORT TO PREFESSIONALS SPECIFIED, ANY UNAUTHORISED REPAIRING ARE NOT COVERED BY WARRANTY		



This marking indicates that this product should not be disposed with other household wastes throughout the nation. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

TRIO®

Plancher

