TRIO *Cuisine*

RICE COOKER



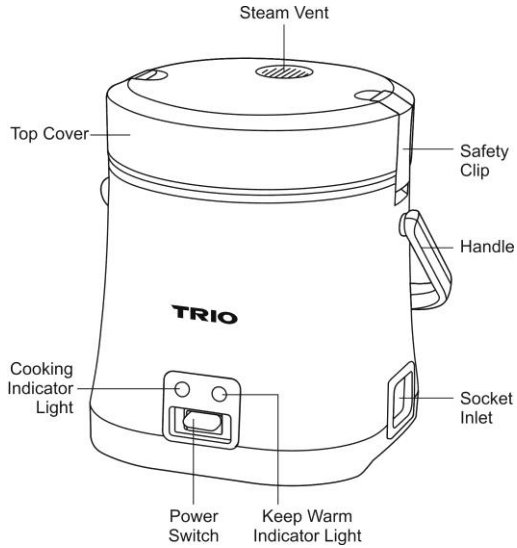
USER MANUAL

TJC-030

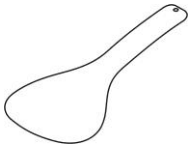
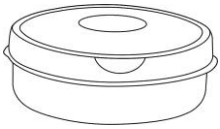
General Safety Precautions

1. Please read and save these instructions carefully before use.
2. Ensure the voltage indicated on the type plate corresponds to the mains supply.
3. Always switch off and unplug the appliance from the main electrical supply **BEFORE** cleaning and also when the appliance is not in use.
4. Never immerse the appliance in water or other liquids to avoid damage and other hazards.
5. Never leave the appliance unattended while it is connected to the mains.
6. Close adult supervision is necessary when operating appliance, especially where children are present.
7. Ensure the electrical cord does not hang over the work surface.
8. Do not operate the appliance with a damaged cord set, or plug. Any repairs should always be carried out by the Customer Service Centre or by an authorized service centre.
9. Do not place the appliance on or near a hot gas or electric burner, in a heated oven, or near easily flammable materials.
10. Always place appliance on a flat sturdy surface. When moving appliance, always take precaution not to touch hot surfaces.
11. Use of accessories or equipment not supplied by the manufacturer may cause damage or result in the malfunctioning of your appliance or bodily injuries.
12. This appliance is intended for household use only.

Parts Identification



Accessories

			
Scoop	Measuring Cup	Dish Box	Power Cord

Specifications

Model	**TJC-030**
Rated Voltage	**240V~**
Rated Wattage	**200W**
Capacity	**0.3L**
Frequency	**50/60Hz**

Precautions for Rice Cooker

1. When washing the rice, always use another container and not the inner pot as over time the inner pot will be damaged if used in this manner.
2. The rice cooker will not function when the inner pot is not placed inside the cooker.
3. Keep the base of the inner pot and the heater surface clean and dry. Foreign objects located between inner pot and heater surface will cause rice cooker to malfunction.
4. Do not force to turn on the appliance. If it is difficult to engage the switch, check for incorrect placement of the inner pot or if there are foreign objects on the heating plate.
5. It is recommended not to use the Keep Warm function for more than 4 hours. Whilst the rice cooker will not damage, the rice will become discolored and a burnt smell may be detected.
6. Correct measurement of one cup of rice is when the rice grains are level with the top of the cup.

How to Cook Rice

1. Measure the amount of rice needed with the measuring cup provided.
2. Put the washed rice into the inner pot and add water as required. In general, 1 cup of rice is needed for 1 cup of water. However, we recommend you to use the water level provided on the inner pot.
3. Maximum capacity is 1.5 cups of uncooked rice with 1.5 cups of water.
4. **When cooking rice and steaming food at the same time, the maximum capacity will be 1.0 cups of uncooked rice with 1.0 cups of water.**

   Note: Always remove the Dish Box cover when steaming.
5. Wipe the exterior of the inner pot with a clean cloth before placing the inner pot in the cooker. Rotate the inner pot so that it is sitting evenly on the heating plate.

6. Lock the top cover properly and connect it to the Mains electrical supply.
7. Press the power switch. The “Cooking” indicator light will be on.
8. When the rice is cooked, the power switch will pop up and the “Keep Warm” indicator light will be on. The rice cooker will be automatically switched over to Keep Warm function.
9. For best results, it is recommended that Keep Warm function be allowed to continue for about 15 minutes before opening the lid or starting to scoop out the rice.
10. It is recommended not to use Keep Warm function for more than 4 hours. Otherwise, the rice may become hard and dry.
11. Stir up the rice within 30 minutes, after cooking is finished as it may become sticky and lumpy.
12. To stop the Keep Warm function, simply switch off the Mains electrical supply.

Care and Cleaning

1. Always unplug the appliance after use and allow the appliance to cool down completely.
2. Do not use a metal scoop to scoop out the rice or as the inner pot may be damaged. Always use the rice scoop provided.
3. Do not use abrasive sponge, scouring pads, or stiff brush to clean your rice cooker. The inner pot, steamer tray and scoop may be cleaned with mild soapy water using a sponge of soft cloth.
4. Occasionally, wipe the exterior surfaces with a damp cloth.
5. Occasionally, check that there are no foreign objects in the inner part of rice cooker, heater or the centre thermostat. Remove them if found. Wipe surfaces with a damp cloth.
6. The inner part of the lid should be cleaned as frequent as possible (recommended once a week) with a damp cloth, remove remaining food particles left there.



This marking indicates that this product should not be disposed with other household wastes throughout the nation. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

TRIO

Cuisine

