TRIO *Cuisine*

JUICE EXTRACTOR / BLENDER & MILLER



USER MANUAL

TJEX-253

Safety Protection

- Read all instructions carefully before using the appliance.
- Ensure that the voltage range given on the appliance-rating label corresponds with that of your main voltage.
- Keep children away when appliance is in use.
- This appliance is suitable for normal household use only and not for commercial use.
- Use the appliance only on a level working surface.
- Do not hold and slant the appliance while it is in operation.
- Never put your fingers in the filling shaft.
- Do not operate the appliance with a damaged cord or plug or after the appliance malfunctions or has been dropped or damaged. Return the appliance for examination, adjustments, or repair.
- The use of attachments not recommended may cause fire, electrical shock, or risk of injury.
- Never open the cover before the motor has stopped. Never immerse the motor base in water; wipe with a damp cloth to clean it.
- Unplug the unit when not in use and whenever you clean or move the unit.
- To disconnect the appliance, set control to off, grip plug and pull from wall outlet. Never pull on the cord.

- Repairs on electrical appliances must only be done by authorized service personnel. Faulty, unqualified repair work may cause accidents or injury to the user.

- Do not use the appliance if the rotating filter is damaged.

- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

- This juicer is equipped with a protection device. If the clamp fails to buckle the juicer, the motor cannot start. This is a safety protection feature.

- Always operate the appliance on a flat, sturdy table, and operate it according to the following requirements.

- Do not uncover the juicer cap during operation and never insert your fingers or other objects into the juicer feed inlet before switching off the power to avoid damage or injury.

- Always check if the residue in the juicer slot is full. If it is, then turn the power off. Clean the residue before restarting.

- Always cover and fasten with buckle before use.

- This juicer is intended for household use only.


- Do not leave the juicer unattended when in use. Close supervision is necessary when operating the juicer near children.

- Unplug after every use. Only then should you pour out the juices.

Specifications

Model	TJEX-253
Voltage	220-240V~
Frequency	50Hz
Power	250W

Parts Identification

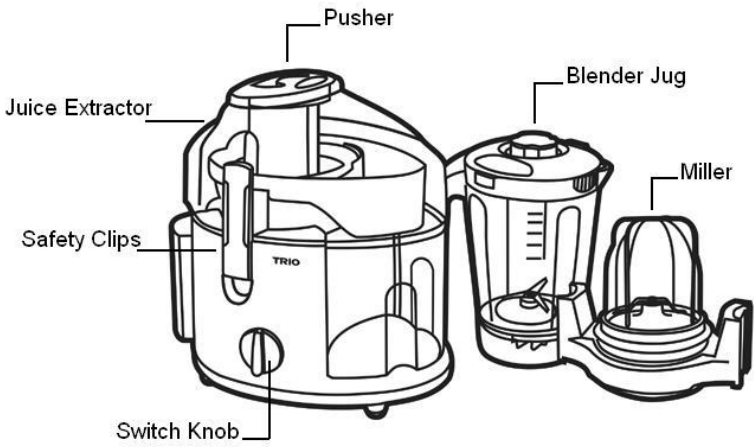

Operating Instructions

Juice Extraction

1. Peel and clean the vegetables and fruits. Cut them into pieces so that they can be inserted into the juicer from the Feeding Tube.

2. Switch on the main power and start the juicer for 5 seconds. Then insert vegetables and fruit into the juicer's feeding tube evenly. Forcefully push them in using the pusher.

3. Lift the safety clips from underneath and pull outwards until the clips are facing down.

4. Lift off the feeder lid and remove the juicer-extracting tray and filter.

5. Insert the accessory connector, make sure the raised sections are outward facing and are in line with the safety clips.

6. Lift the safety clips and place them into the accessory connector until the grooves meet, once the clips are secure push the clips down to lock the connector into place.

7. Safety Interlocking Switch: The unit will not work if attachments are not correctly locked in place using the safety clips.

Blender

1. Place the food you wish to blend into the blender jar.

2. Put the lid on the blender jar and press down securely. Then, turn clockwise to lock.

3. Select the correct speed setting for your ingredients.

4. Turn the control button to position “2” more solid consistency – for mixed liquids and solid foodstuff, fruits, pancake batter, cake mix etc.

5. Otherwise, press and hold the button manually for short, frequent on/off pulse actions to move ingredients around.

Miller

1. Place the food ready to be grinded into the grinder, and make sure the volume is not more than 150g.

2. Put the lid on the grinder and press down securely. Then, turn clockwise to lock.

3. Select the correct speed setting for your ingredients.

4. Turn off the appliance when the operation is completed. Remove the grinder cup only after the motor has stopped running.

5. Water is forbidden in the grinding cup.

Cleaning and Maintenance

1. If the juicer is left idle for a long duration, it is advisable to store it in a well-ventilated place to prevent its motor from getting damp.
2. Do not wash the motor with water. Wipe it with a piece of dry cloth.
3. Disassemble the juicer blades. Lubricate the blade shaft and bearing with oil every month.
4. Use warm water and mild detergent to wash the juicer. Rinse and dry thoroughly.

TRIO

Cuisine

