
TRIO® Cuisine


MULTI GRILL

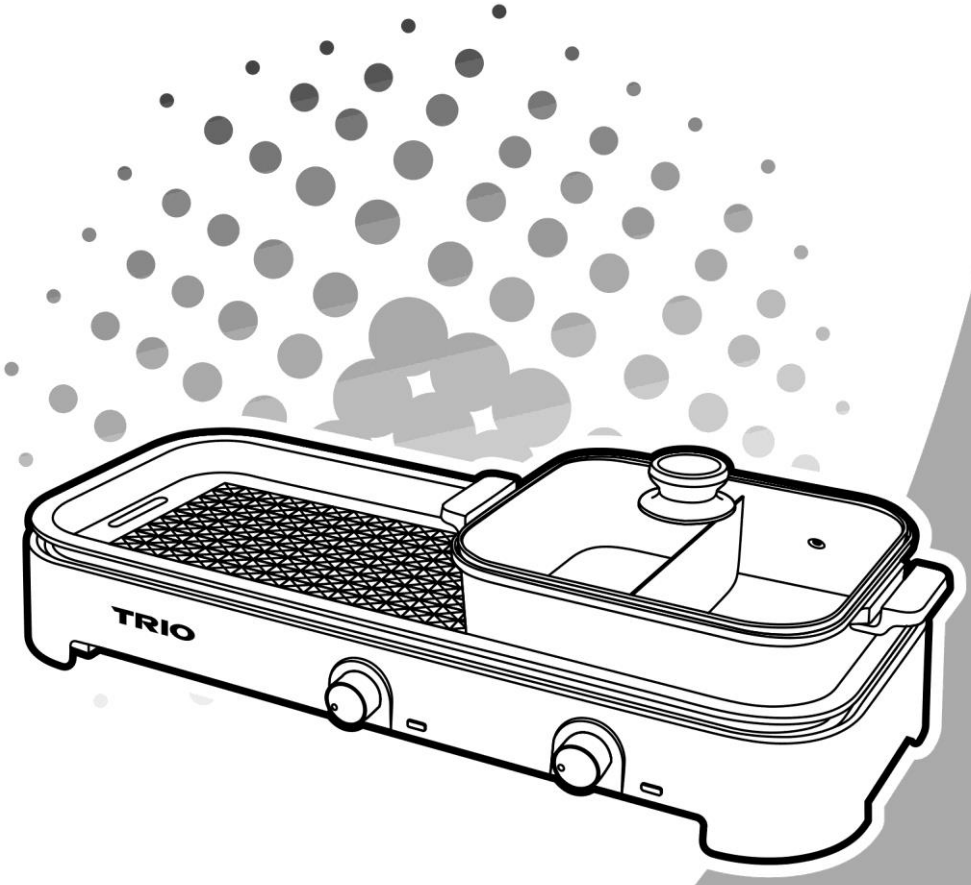

USER MANUAL

TMG-6316

Parts Identification

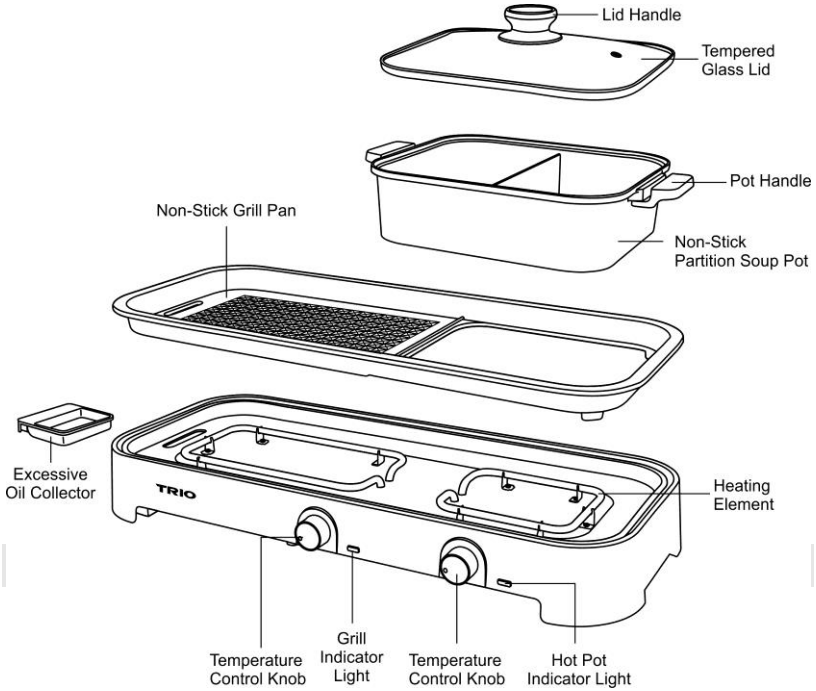

Model	TMG-6316
Rated Voltage	220-240V~
Rated Wattage	2200W
Frequency	50/60Hz

General Safety Precautions

1. Read all instructions carefully. Keep instructions booklet for future reference.
2. Always unplug appliance from the Mains electrical supply outlet before cleaning it or when not in use.
3. Always attach the power cord to the appliance BEFORE you plug it to the Mains electrical supply. To disconnect appliance, switch off first before removing the plug from the Mains electrical supply outlet.
4. Close supervision is necessary when operating appliance near children. Ensure the electrical cord does not hang over the work surface.
5. Do not operate appliances with damaged cord set, or plug. Any repairs should always be done by an experienced technician or by an authorized service center.
6. Always place appliance on a flat sturdy surface. When moving appliance, always be aware not to touch hot surfaces, or possible spillage of hot liquids it may contain.
7. Do not immerse appliances, or electrical parts into water or any other liquids.
8. Use of accessories or equipment not supplied by the manufacturer may cause damage or malfunctioning of your appliance or result in injuries.
9. Do not place the appliance on or near heat sources such as a gas or electric burner, or in a heated oven.
10. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience & knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

How to Use Your Appliance

Before Use:

1. Remove all packaging from the appliance before use.
2. Check that the non-stick coating plate is free from dust. Wipe the surface of the plates with a damp cloth and dry with a cloth or kitchen towel.
3. Before using your appliance for the first time, the non-stick coating plate must be seasoned during the preheating time to protect the non-stick surface.

How to Use:

1. Place the appliance on a flat and sturdy surface.
2. Connect the multi grill to the power outlet and switch it on.
3. Select your desired functions such as “Grill”, “Hop Pot” or both.
4. As pouring water or soup into an empty soup pot is dangerous (the hot surface may cause water or the soup to splash), always pour water or soup into the soup pot first before turning on the power.
5. You may adjust the desired temperature while cooking.
6. When the indicator light is on, it warms up automatically. When the indicator light is off, it means that your desired temperature has already been achieved.
7. While cooking, it will stop heating when the temperature has reached the maximum temperature and it will automatically reheat after a few minutes.
8. Always use a wooden spatula for stir frying or stirring so as not to damage the non-stick grill pan.
9. After cooking, ensure the temperature control knob is at the “OFF” position. Only then should you remove the power plug from the power supply.

CAUTION:

- **This appliance should always be operated on a separate power outlet from other operating appliances. It is dangerous to operate if the power outlet is overloaded with other appliances. Do not use multi-way adaptors.**
- Do not hard-scrub the grill pan and soup pot as it may damage the non-stick coating. Use non-abrasive and non-metallic cleaning materials only.
- Do not touch hot surfaces. Use oven mitts and hold by the appliance's handles to move it while the appliance is hot. Always place the appliance on a heat-resistant surface.
- Never move the appliance containing hot liquids or oil.

Care and Cleaning

1. Always unplug the appliance after use and allow the appliance to cool down completely.
2. Wipe the exterior surfaces and internal with a damp cloth. Do not flush the whole appliance with water.
3. Do not use an abrasive sponge, scouring pads, or stiff brush to clean the appliance. The baking plate may be cleaned with mild soapy water using a sponge or soft cloth.
4. Do not clean with abrasive cleaning agents such as detergent, gasoline, or turpentine.



This marking indicates that this product should not be disposed with other household wastes throughout the nation. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

TRIO®

Cuisine

