
TRIO® Cuisine


# COMMERCIAL RICE COOKER

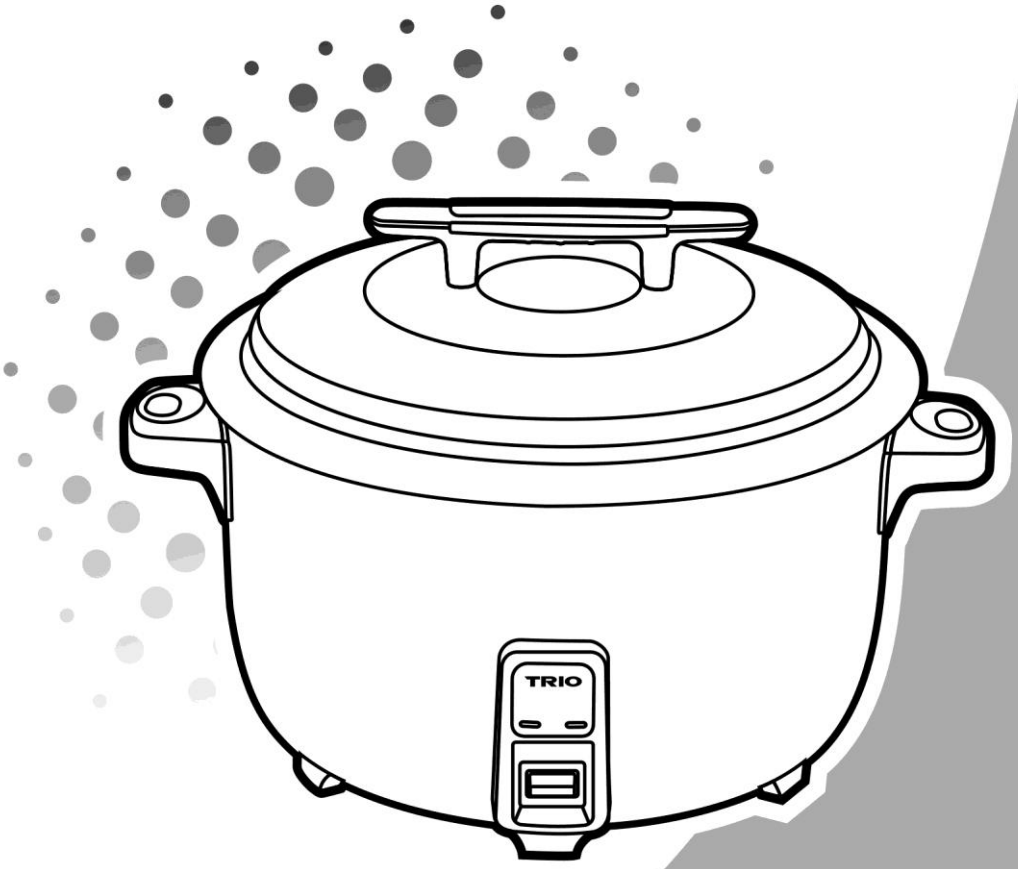



**USER** MANUAL

**TRC-6601**

# Parts Identification

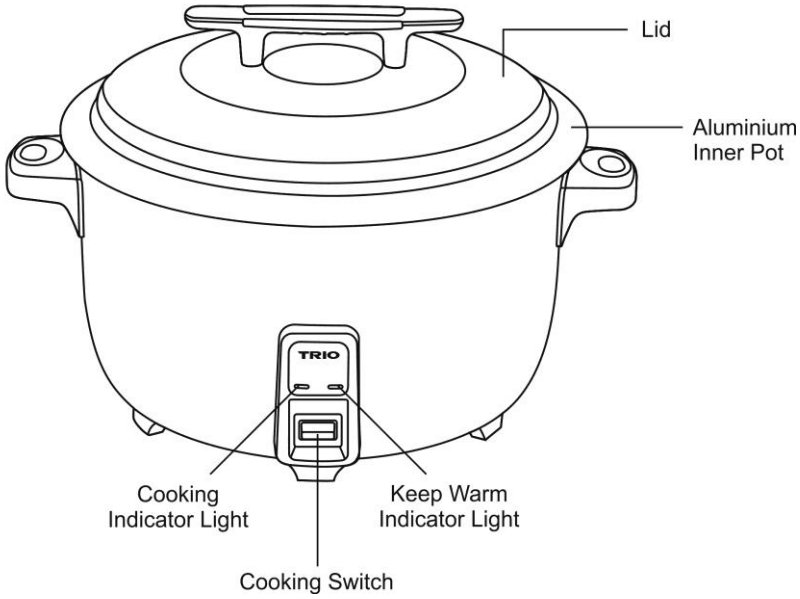


## Accessories
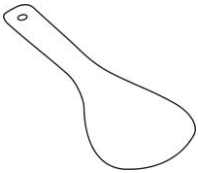
| | |
|---|---|
|  |  |
| Rice Scoop | Measuring Cup |

## Specifications

| Model | TRC-6601 |
|---|---|
| Rated Voltage | 220-240V~ |
| Rated Wattage | 2500W |
| Frequency | 50/60Hz |
| Capacity | 6.6 Litre |
| **Minimum** of cooking white rice | 10 cups |
| **Maximum** of cooking white rice | 42 cups |

****Recommendation:**

- **It is strongly recommended measure the amount of rice with the measuring cup as provided for the best cooking results.**
- **Older rice and new crop rice water absorption are different, when cook maximum cups of white rice, it is strongly recommended immerse the white rice for 30-45 minutes for the best taste results.**

## General Safety Precautions

1. Please read and save these instructions carefully before use.
2. Always switch off and unplug the appliance from the main electrical supply **BEFORE** cleaning and also when the appliance is not in use.
3. Never immerse the appliance in water or other liquids to avoid damage and other hazards.
4. Close adult supervision is necessary when operating appliance, especially where children are present.
5. Ensure the electrical cord does not hang over the work surface.
6. Do not operate the appliance with a damaged cord set, or plug. Any repairs should always be carried out by the Customer Service Centre or by an authorized service centre.

7. Do not place the appliance on or near a hot gas or electric burner, in a heated oven, or near easily flammable materials.
8. Always place appliance on a flat sturdy surface. When moving appliance, always take precaution not to touch hot surfaces.
9. Use of accessories or equipment not supplied by the manufacturer may cause damage or result in the malfunctioning of your appliance or bodily injuries.
10. This appliance should not be used by people who are physically or mentally impaired (including children) unless proper guidance is provided during operation.

## Precautions for Rice Cooker

1. When washing the rice, always use another container and not the inner pot as over time the inner pot will be damaged if used in this manner.
2. The rice cooker will not function when the inner pot is not placed inside the cooker.
3. Keep the base of the inner pot and the heater surface clean and dry. Foreign objects located between inner pot and heater surface will cause rice cooker to malfunction.
4. Do not force to turn on the appliance. If it is difficult to engage the switch, check for incorrect placement of the inner pot or if there are foreign objects on the heating plate.
5. It is recommended not to use the Keep Warm function for more than 4 hours. Whilst the rice cooker will not damage, the rice will become discolored and a burnt smell may be detected.
6. Correct measurement of one cup of rice is when the rice grains are level with the top of the cup.


## How to Cook Rice

1. Measure the amount of rice needed with the measuring cup provided. Wash the rice in a separate bowl to avoid damage to inner pot.
2. Put the washed rice into the inner pot and add water as required. **For example, if 30- cup of rice is used, the water level should reach the number “30” line that embossed inside the inner pot.**

3. Wipe the exterior of the inner pot with a clean cloth before placing the inner pot in the cooker body. Rotate the inner pot so that it is sitting evenly on the heating element.
4. Make sure the rice is distributed evenly in the inner pot.
5. Cover the inner pot with lid properly. Insert the plug on the power cord into electrical power outlet.
6. Turn on the power supply.
7. To start the cooking process, press down the cooking switch and the cooking indicator light will be on to indicate the rice cooking in progress.
8. When the rice is cooked, the rice cooker will automatically switch over to the keep warm function and the keep warm indicator will light up.
9. For best results, it is recommended that the keep warm function be allowed to continue for about 15 minutes before opening the top cover or starting to scoop out the rice. Beware of hot steam when removing lid.
10. Unplug the cord after use, or whenever the unit is to be left unattended.

## Care and Cleaning

1. Always unplug the appliance after use and allow the appliance to cool down completely.
2. Do not use a metal scoop to scoop out the rice as the inner pot may be damaged. Always use the plastic ladle provided.
3. Do not use abrasive sponge, scouring pads, or stiff brush to clean your rice cooker. The inner pot and scoop may be cleaned with mild soapy water using a sponge of soft cloth.
4. Occasionally, wipe the exterior surfaces with a damp cloth.
5. Occasionally, check that there are no foreign objects in the inner part of rice cooker, heater or the centre thermostat. Remove them if found. Wipe surfaces with a damp cloth.

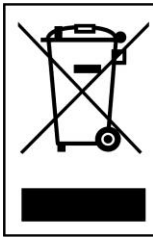

This marking indicates that this product should not be disposed with other household wastes throughout the nation. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

TRIO®

*Cuisine*

