TRIO® CORDLESS

RECHARGEABLE


CHOPPER



USER MANUAL

TRS-50C

Parts Identification

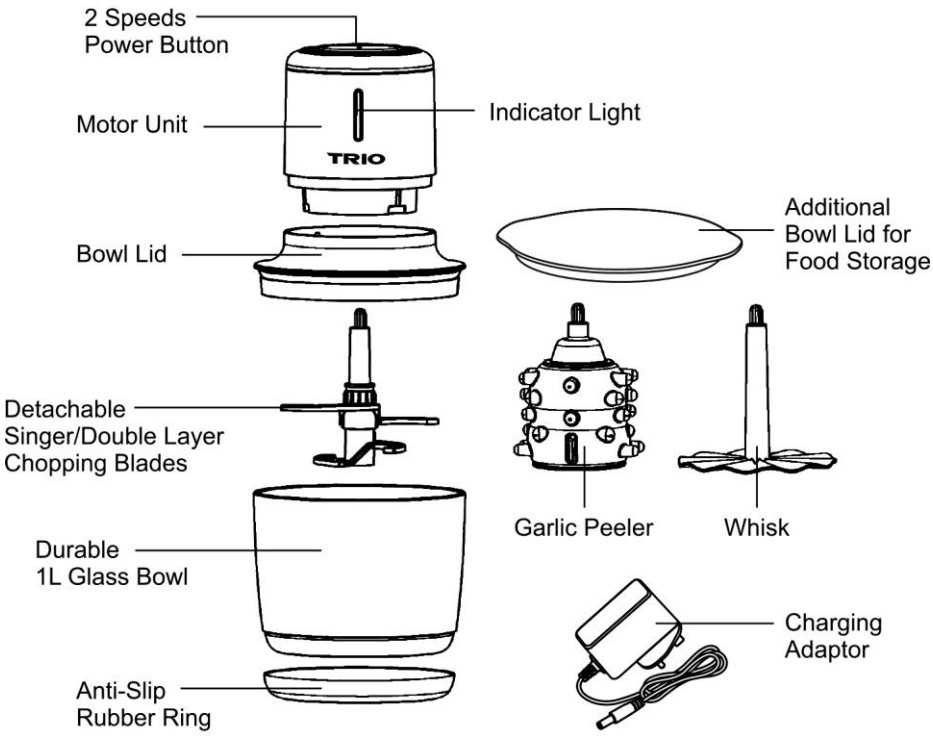

Specifications

Model	**TRS-50C**
Rated Voltage & Power	**DC 12V, 200W**
Battery Charge Time	**2½ HOURS**
Adaptor Input Voltage	**100-240V~ 50/60Hz, max.0.5A**
Adaptor Output:	**DC13V, 1000mA**

General Safety Precautions

1. Read all instructions carefully before using the appliance.
2. Check that the voltage range given on the appliance-rating label corresponds with that of your main voltage.
3. Keep children away when appliance is in operation.
4. This appliance is suitable for normal household use only and not for commercial use.
5. Always operate the appliance on a flat level and dry surface.
6. Do not hold the appliance on the slant while it is still in operation.
7. Do not operate the appliance with a damaged cord or charger, or after the appliance malfunctions or has been dropped or damaged in any manner. Return the appliance for examination, adjustments, or repair.
8. The use of attachments not recommended may cause fire, electrical shock, or risk of injury.
9. Never open the lid cover before the motor has stopped. Never immerse the motor base in water or other liquids; wipe with a damp cloth to clean it.
10. Repairs an electrical appliance must only be done by authorized service personnel. Faultily, unqualified repair work may cause accidents or injury to the user.
11. If the appliance is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
12. This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by person responsible for their safety.
13. Unplug the unit when not in use and whenever you clean or move the unit.

14. Children should be supervised to ensure that they do not play with the appliance.

How to Use Your Appliance

CHARGING INSTRUCTION

1. The appliance must be charged by battery charger with a specification of DC13V 1A. When charging, the indicators illuminate alternately from bottom to top. And the four LEDs will light solidly after charging is completed.
2. The appliance cannot be activated for working when it is being charged.
3. The adapter with a specification of DC13V 1A must be purchased from a regular channel.

   NOTE: Minimum 30 minutes rest time must be maintained between three consecutive after being fully charged, the Rechargeable Chopper can keep working for 5 cycles continuously, and cycles.

BEFORE FIRST USE

1. Before using the product for the first time, please ensure that the battery is fully charged and the parts that come into contact with the food shall be cleaned thoroughly.
2. Remove any stickers or packaging materials on the appliance, wash the accessories with mild dish detergent and rinse them thoroughly with water.

HOW TO CHOP FOOD

1. Place the glass bowl on the flat surface, and then install the blade on the spindle at the bottom of the glass bowl. Do not touch the blade as it is very sharp.


2. Put the food into the glass bowl. Please refer to the **"Guide for Chopping Food"** to get an ideal chopping result.

3. Close the bowl lid, and install the motor on the corresponding position of the bowl lid by aligning the bumps on the bowl lid with the holes of the motor, and then make adjustment according to the locking marks of motor and bowl lid until the motor is locked well in position.

4. Press and hold the power button speed "I" or "II" to chop the food until get your desired results.

NOTE: Avoid running the motor continuously for more than 1 minute. The longer the continuous operation, the finer the texture of the food. For coarse food, please operate on a short period.

5. When chopping is completed, be sure the chopping blade stops rotating completely before removing the motor unit. Remove the motor unit and bowl lid; carefully lift up the chopping blade out. Empty the processed food.

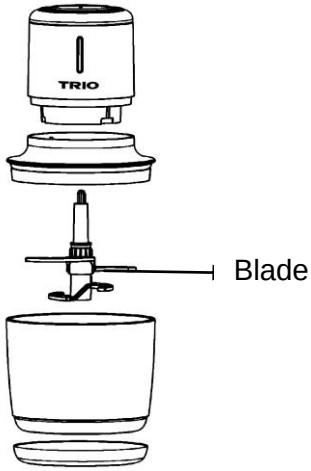


HOW TO WHISK EGG

1. Place the glass bowl on the flat surface, and install the whisk on the spindle at the bottom of the glass bowl, then add three egg whites into the bowl.

2. Close the bowl lid, and install the motor on the corresponding position of the bowl lid by aligning the bumps on the bowl lid with the holes of the motor, and then make adjustment according to the locking marks of motor and bowl lid until the motor is locked well in position.

3. **Press and hold the power button speeds “I” or “II” to whisk egg white until get your desired results.**

4. When whisking is completed, be sure the whisk stops rotating completed before removing the motor unit. Remove the motor unit and bowl lid; carefully lift up whisk out. Empty the processed food.

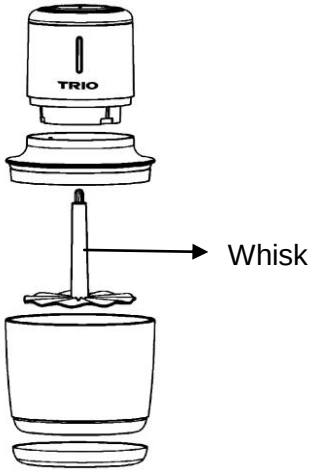


HOW TO PEEL GARLIC

1. Place the glass bowl on the flat surface, and install the garlic peeler on the spindle at the bottom of the glass bowl, then add garlic cloves into the bowl.

2. Close the bowl lid, and install the motor on the corresponding position of the bowl lid by aligning the bumps on the bowl lid with the holes of the motor, and then make adjustment according to the locking marks of motor and bowl lid until the motor is locked well in position.

3. Press and hold the power button speed “I” or “II” to peel garlic until get your desired results.

4. When peeled garlic is completed, be sure the garlic peeler stops rotating completed before removing the motor unit. Remove the motor unit and bowl lid; carefully lift up the garlic peeler out. Empty the processed food.

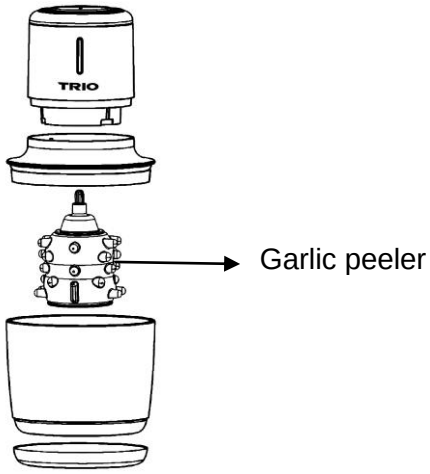

GUIDE FOR CHOPPING FOODS


Type of food	Operation
Fresh meat cut into cubes of 30 x15mm	Add at max 300-400g meat, and then process the meat in a cycle of 30s-ON and 1Min-OFF, perform several cycles until the required processing result is got.
Fruits and vegetables (Canned, boiled)	Add at most 120g fruits or vegetables and water or soup, and then process the food in a cycle of 20s-ON and 1Min-OFF, perform several cycles until the required processing result is got.
Fresh celery and other leafy plants	Clean and dry the leafy plants completely, and then process the food in a cycle of 20s-ON and 1Min-OFF, perform several cycles until the required processing result is got.
Nut	Add at most 120g nuts, and then process the nuts in a cycle of 30s-ON and 1Min-OFF, perform several cycles until the required processing result is got.
Garlic	Add at max 250-300g garlic cloves, and then process the garlic in a cycle of 30s-ON and 1Min-OFF, perform several cycles until the required processing result is got.
Peel garlic	Add at max 120-150g of garlic cloves, and then peel the garlic in a cycle of 60s-ON and 1Min-OFF, perform several cycles until the required processing result is got.
Egg white	Add egg whites of up to 4 eggs, then beat 1 minute in each cycle with the egg beating kit until desired level is reached Using high-grade).

CAUTION!

The appliance will be protected and stop rotating if the appliance load exceeds the standard such as excessive product temperature caused by long working hours; excessive food consumption or too large of foods. At the time, the power indicator will flash to indicating stop after 10s, it can start normally after abnormal elimination**.**

Care and Cleaning

- Always disassemble the motor unit from the accessory first before cleaning.
- After use, please clean the glass bowl and chopping accessory with warm water and liquid soap in the dishwasher immediately.
- Wipe the motor with a wet cloth, and the motor can not be immersed into the water for cleaning.
- Never immerse the motor base in water or other liquids. Clean it with a damp cloth.
- The blade cannot be cleaned with hand directly and can be cleaned by a toothbrush or similar tools. Do not use chemicals, steel, wood or abrasive materials to clean the appliance, otherwise it will damage the surface of the product.
- **WARNING:** Exercise care when handling the cutting blades as they are sharp.

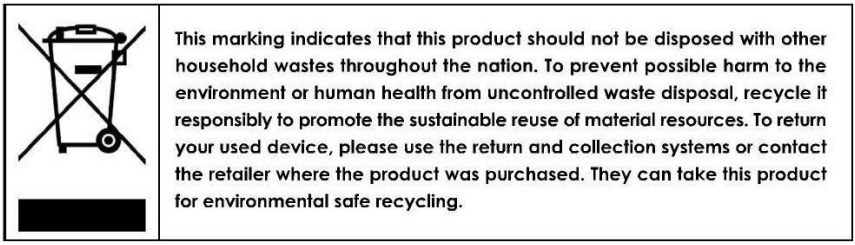

TRIO®

CORDLESS

