TRIO® CORDLESS

RECHARGEABLE


HAND BLENDER



USER MANUAL

TRS-51HB

Parts Identification

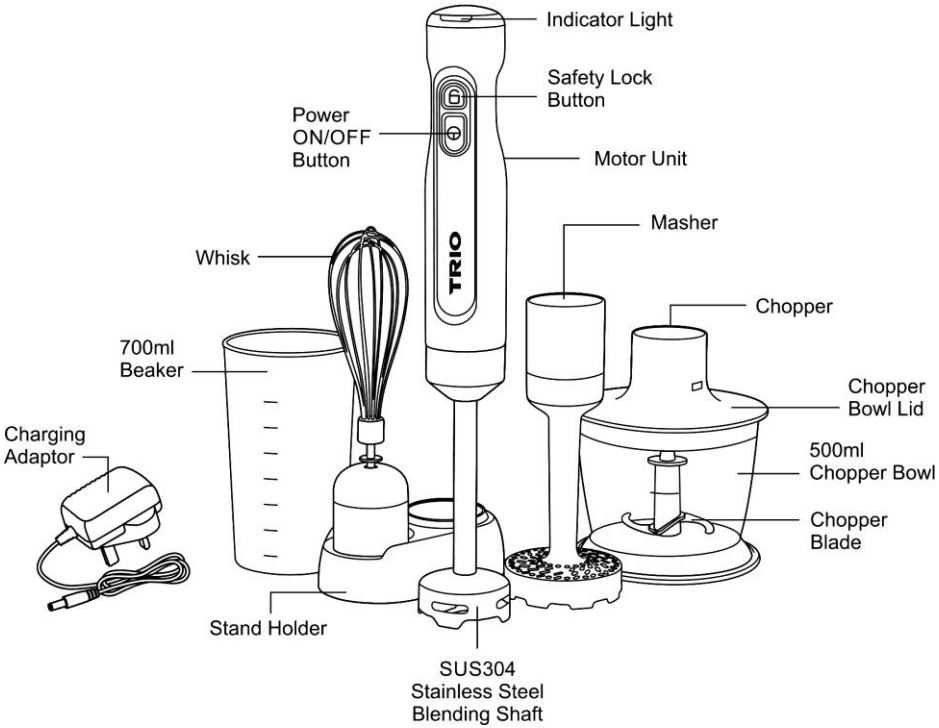

Specifications

Model	**TRS-51HB**
Rated Voltage & Power	**DC 12V, 100W**
Battery Charge Time	**3 HOURS**
Adaptor Input Voltage	**100-240V~ 50/60Hz, max.0.3A**
Adaptor Output:	**DC12V, 1000mA**

General Safety Precautions


1. Read all instructions carefully before using the appliance.
2. Check that the voltage range given on the appliance-rating label corresponds with that of your main voltage.
3. Keep children away when appliance is in operation.
4. This appliance is suitable for normal household use only and not for commercial use.
5. Always operate the appliance on a flat level and dry surface.
6. Do not hold the appliance on the slant while it is still in operation.
7. Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Return the appliance for examination, adjustments, or repair.
8. The use of attachments not recommended may cause fire, electrical shock, or risk of injury.
9. Never open the lid cover before the motor has stopped. Never immerse the motor base in water or other liquids; wipe with a damp cloth to clean it.
10. Repairs an electrical appliance must only be done by authorized service personnel. Faultily, unqualified repair work may cause accidents or injury to the user.
11. If the appliance is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
12. This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by person responsible for their safety.
13. Unplug the unit when not in use and whenever you clean or move the unit.

14. Children should be supervised to ensure that they do not play with the appliance.

How to Use Your Appliance

Charging Instruction


1. Before using your Rechargeable hand blender for first time, charge for 3 hours. When charging, the indicator light (Red) illuminate and the indicator light will turns (Blue) after charging completed.
2. Connect the charging adaptor to the product and then to the mains.
3. The appliance cannot be activated for working when it is being charged.
4. **To preserve the life of batteries, let recharge for 30 minutes when the red indicator light on the unit is flashing.**

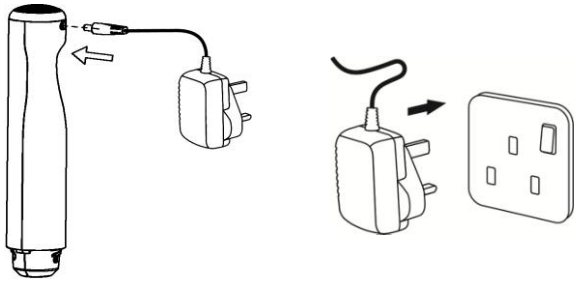


Before First Use

1. Before using the product for the first time, please ensure that the battery is fully charged and the parts that come into contact with the food shall be cleaned thoroughly.
2. Remove any stickers or packaging materials on the appliance, wash the accessories with mild dish detergent and rinse them thoroughly with water.

Know your blender (It is suitable for blending vegetable and fruit)

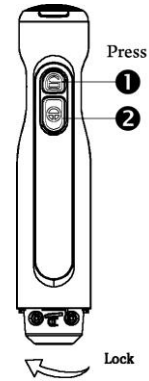



Instruction for blender:

Caution

- **Do not operate continuously for more than 1 minute without intervals.**

1. **Insert motor unit into the blending shaft, and turn clockwise to secure.** Position the blending shaft into the beaker.


2. **Press and hold the safety lock button to unlock. (Refer ❶).**

3. **While holding onto the safety lock button, press the ON/OFF power button to activate (Refer ❷).**

4. Once power is on, you may release the safety lock button to start blending.

5. Once you have finished blending, rotate the motor unit anti-clockwise to remove blending shaft.


Know your accessory-chopper (Using for chopping meat and making garlic paste)

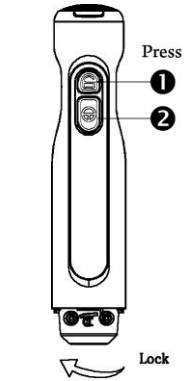


Instruction for chopper:

Caution

- **Do not operate continuously for more than 1 minute without intervals.**
- **To avoid damage to the motor part, the weight of the ingredients should not exceed 200g.**
- **Remove all bones and tendons before blending, cut meat into small pieces then place the meat into bowl.**

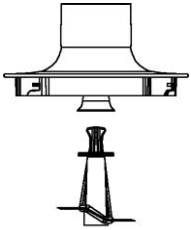

1. Place the chopper bowl on a level working surface.
2. Place the chopping blade on the centre pin of the chopper bowl.
3. Place food into the chopper bowl.

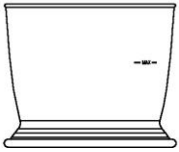

4. Put the lid onto the chopper bowl, make sure the inside wall of bowl aligns with the groove of lid, then put down the lid and turn it in clockwise direction until it locks into position. To detach the lid, turn in adverse direction.

5. **Insert the motor unit into the hole of chopper lid and turn clockwise to secure.**

6. **Press and hold the safety lock button to unlock. (Refer ❶)**

7. **While holding onto the safety lock button, press the ON/OFF power button to activate. (Refer ❷)**


8. Once power is on, you may release the safety lock button to start chopping.

9. Once chopping completing, remove the motor unit from the chopper lid by turning anti-clockwise.


10. Open the chopper lid by turning anti-clockwise, carefully take out the blade and remove the processed food from the chopper bowl.


Caution:

- To reduce the risk of injury, never place cutting blade on base without first putting bowl properly in place.
- Ensure chopper lid is securely locked in place before operating appliance.
- After chopping, for safety, you shall disassemble the motor unit from the chopper lid first, and then remove the chopper lid. Never remove the chopper lid with the motor unit in place.

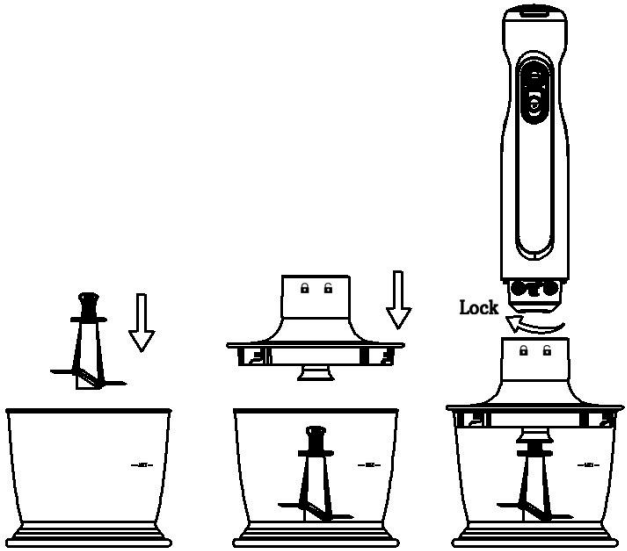

Know your accessory-Whisk (for mixing egg white)

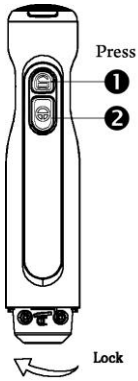

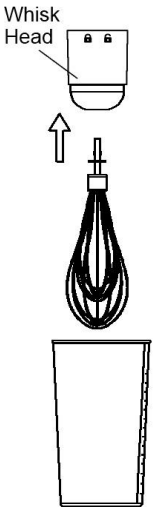


Instruction for egg white whisk:

Caution

- **Do not operate continuously for more than 2 minutes without intervals.**

1. **Insert the whisk into the whisk head.**
2. **Then insert the motor unit into the whisk head and turn clockwise to secure.**
3. Place the egg white into the beaker, which generally fits two egg whites.
4. Position the whisk into beaker.
5. **Press and hold the safety lock button to unlock. (Refer ❶)**
6. **While holding onto the safety lock button, press the ON/OFF power button to activate. (Refer ❷)**
7. Once power is on, you may release the safety lock button to start whisking.
8. Once you have finished whisking, rotate the motor unit anti-clockwise to remove whisk..

Know your accessory-Masher (for blending cooked potato and tomato)

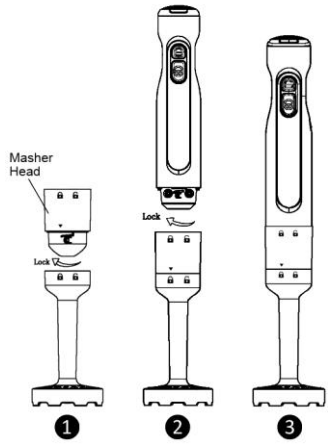

Instruction for Masher:

Caution:

- **Do not operate continuously for more than 1 minute without intervals.**
- **To avoid damage to the motor part, the weight of the ingredients should not exceed 100g.**

1. **Insert the masher head into the masher and turn clockwise to secure. (Refer ❶)**
2. **Then Insert the motor unit into the masher head and turn clockwise to secure. (Refer ❷)**
3. Now masher is completely assembled. (Refer ❸)

4. Put the cooked food into the bowl and position the masher into the cooked food.

5. **Press and hold the safety lock button to unlock.**

6. **While holding onto the safety lock button, press the ON/OFF power button to activate.**

7. Once power is on, you may release the safety lock button to start blending.

8. Once you have finished blending, rotate the motor unit anti-clockwise to remove the potato masher..

Care and Cleaning

- Always disassemble the motor unit from the accessory first before cleaning.

- After use, please clean the accessory with warm water and liquid soap in the dishwasher immediately.

- Wipe the motor unit with a wet cloth, and the motor cannot be immersed into the water for cleaning.

- The blade cannot be cleaned with hand directly and can be cleaned by a toothbrush or similar tools. Do not use chemicals, steel, wood or abrasive materials to clean the appliance, otherwise it will damage the surface of the product.

- **WARNING:** Exercise care when handling the cutting blades as they are sharp.

- Quick cleaning: Fill the jar with water, place the hand blender in the cup and turn on for few seconds. Food particles that are stuck between the blades will usually be dislodged in this manner.



This marking indicates that this product should not be disposed with other household wastes throughout the nation. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

TRIO®

CORDLESS

