
TRIO® *Ventilateur*


# STAND FAN

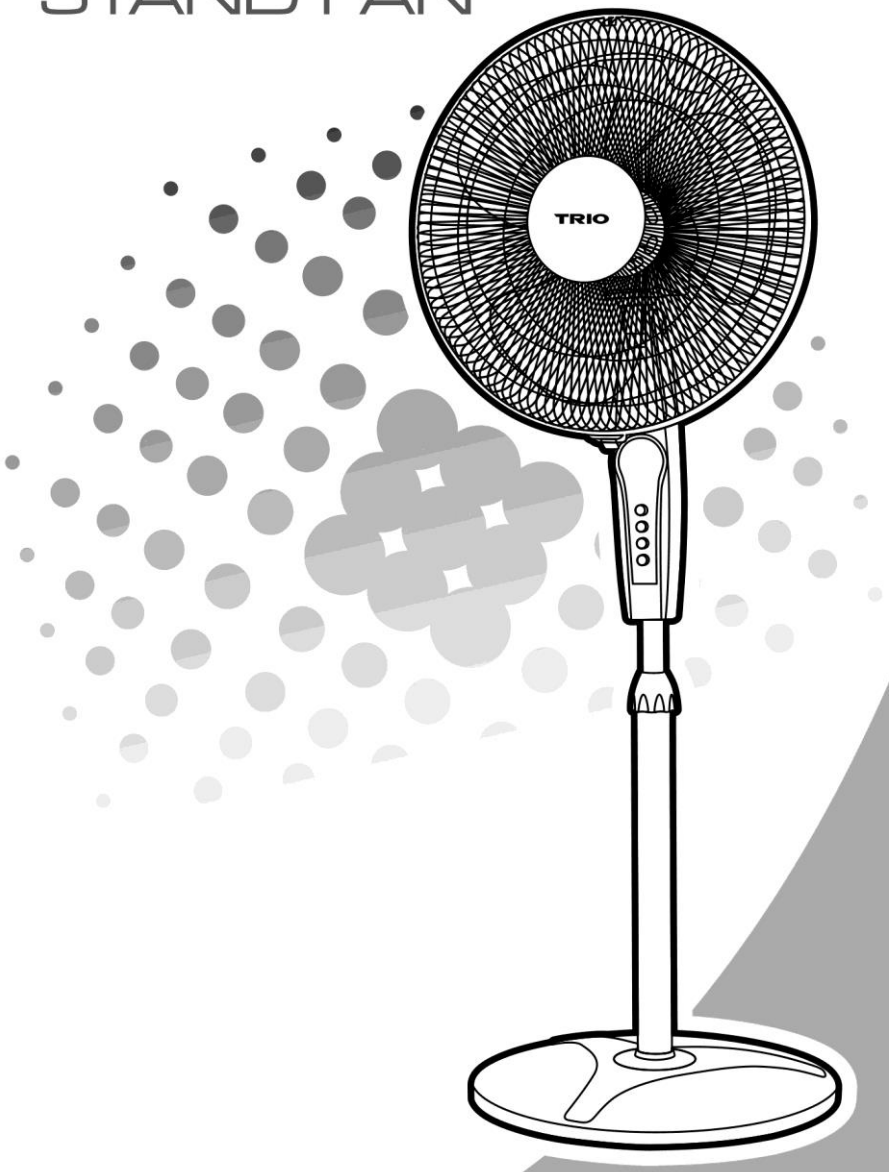


**USER** MANUAL

**TSF-2162A**

# Parts Identification

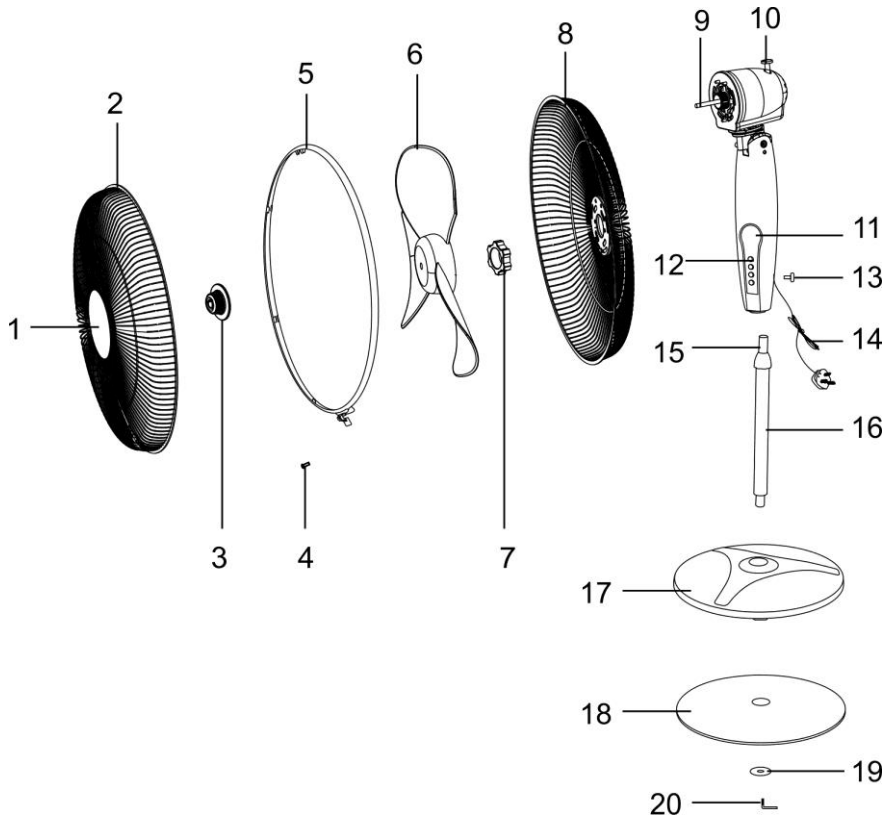


1. Name Plate
2. Front Guard
3. Blade Cap
4. Locking Screw
5. Guard Ring
6. Fan Blade
7. Guard Interlocking Nut
8. Rear Guard
9. Motor Shaft
10. Oscillation Knob
11. Fan Body
12. Switch Knob
13. Screw
14. Power Cord
15. Extension Tube
16. Stand Body
17. Base
18. Base Seal Board
19. Washer
20. L Screw

## Specifications


| | |
|---|---|
| Model | **TSF-2162A** |
| Rated Voltage | **220-240V~** |
| Rated Wattage | **50W** |
| Frequency | **50/60Hz** |
| Blade Size | **16"** |

## General Safety Precautions


1. Read all instructions carefully before using the appliance.
2. Check that the voltage range given on the appliance rating label corresponds with that of your main voltage.
3. Keep children away when appliance is in operation.
4. This appliance is suitable for normal household use only.
5. Operate the appliance only on a level working surface.
6. Do not hold the appliance on the slant while it is still in operation.
7. Do not block the air inlet and outlet grill as it may cause damage to the appliance.
8. Do not operate the appliance with a damaged cord or plug or after the appliance malfunctions or has been dropped or damaged. Return the appliance for examination, adjustments, or repair.
9. The use of attachments not recommended may cause fire, electrical shock, or risk of injury.
10. Never open the cover before the motor has stopped. Never immerse the motor base in water or other liquids; wipe with a damp cloth to clean it.
11. Unplug the unit when not in use and whenever you clean or move the unit.
12. Only authorized service personnel should undertake repairs on electrical appliances. Faultily, unqualified repair work may cause accidents or injury to the user.
13. If the supply cord is damaged, it must be replaced by the manufacturer or authorized service agent in order to avoid a hazard.
14. This appliance cannot be used by physical weak, slow response or mentally disabled people (including children) unless guidance is provided during operation.

# How to Assemble Your Appliance

1. Loosen the “L” screw from the bottom of the stand body.
2. Insert the stand body onto the base unit firmly. Reverse the whole unit and secure the stand body and base seal board with the washer L screw.
3. Ensure the stand body is COMPLETELY interlocked with the base unit.
4. Insert the fan body to the stand body and lock it into position by turning the fan body screw clockwise. Loosen the height adjust knob to extend the extension tube to the required height and then securing knob to tighten.

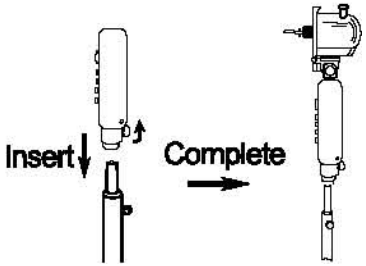



5. Attach the rear guard to the front side of the motor; fasten the guard interlocking nut by turning it clockwise until the guard is secured firmly in place.
6. Mount the fan blade onto the motor shaft; fasten the blade cap by turning anti-clockwise firmly.
7. Attach the front guard’s hook to the rear guard.
8. Push the round edges of front guard to fit it securely into the rear guard. Make sure the round edge is fully inserted with the rear guard.
9. Press the guard clip under the front guard ring and lock the locking screw.

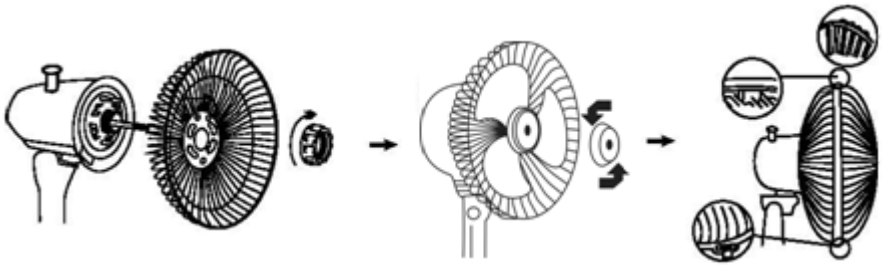


# How to Use Your Appliance


1. Connect the plug into a power supply socket and switch on the power.
2. Switch ON the fan by pressing the control button at any of the “1”, “2” or “3” settings.
3. Press the “3”, “2” or “1” button to adjust the fan speed from High-Medium-Low.
4. To stop the fans, press the “O” button.
5. To tilt the fan, always ensure that the fan is in off position and wait until the blade has completely stopped for safety reasons. Hold the stand firmly with one hand and move the guard gently upwards or downwards.

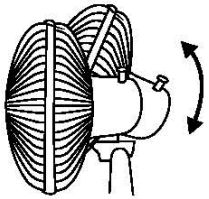

6. The oscillation knob is positioned at the top of the rear motor cover. Press the knob down to make the fan oscillate and pull it up to stop oscillation.

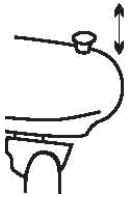

7. To adjust the height of fan, always ensure that the fan is in off position and wait until the blade has completely stopped for safety reason. Hold the stand firmly and loosen the height adjust knob, then push up or pull down the extension tube to adjust the height of fan.

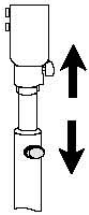

# Care and Cleaning

- Always ensure that the power supply is off and the power cord unplugged from the power supply. Wait until the blade has completely stopped before cleaning.
- Wipe the surfaces of the fan, the base and the fan blade with a soft damp cloth. Never use any corrosive cleaning solution.
- For proper storage, always place the fan in a low humidity environment.



**This marking indicates that this product should not be disposed with other household wastes throughout the nation. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.**

TRIO®

*Ventilateur*

