
TRIO® Cuisine


SNACK GRILL

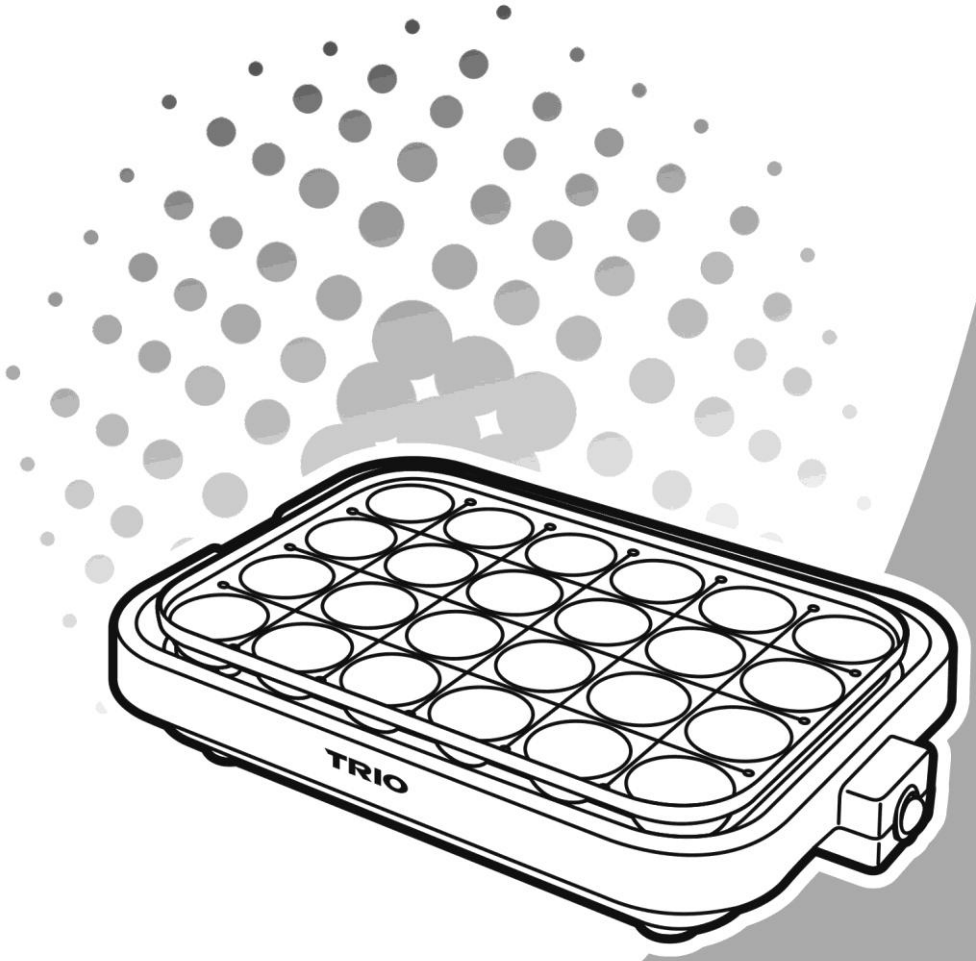

USER MANUAL

TSG-3443

Parts Identification

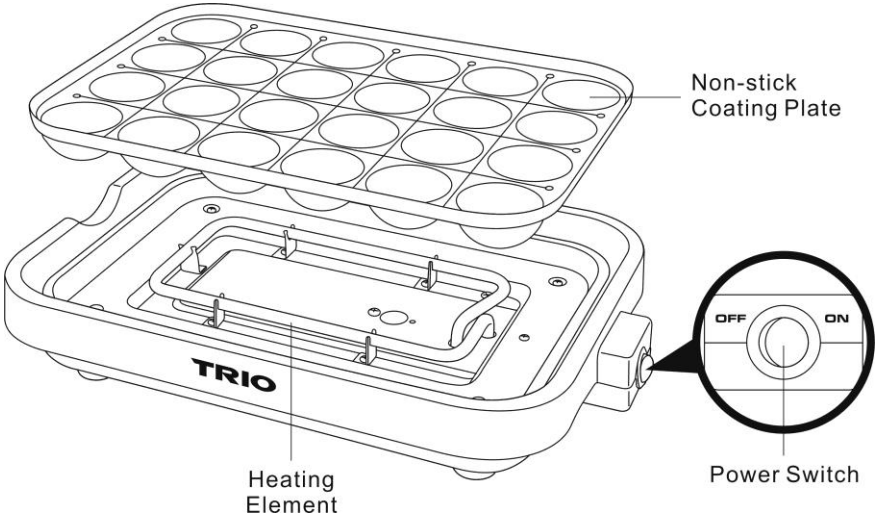

Specifications

Model	**TSG-3443**
Rated Voltage	**220-240V~**
Rated Wattage	**800-950W**
Frequency	**50/60Hz**

General Safety Precautions

1. Please read these instructions carefully before operating and keep it for future reference.
2. This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by person responsible for their safety.
3. Always switch off and unplug the appliance from the mains electricity supply BEFORE cleaning and also when the appliance is not in use.
4. Never immerse the appliance, cord or plug into water or any other liquid to avoid damage and other hazards.
5. Close supervision is necessary when appliance is used by or near children.
6. Ensure the electrical cord does not hang over the work surface.
7. Do not leave appliance unattended when plugged in. Switch off the mains electricity supply when appliance is not in use.
8. Do not operate the appliance with a damaged cord set, or plug. Any repairs should always be carried out by the Customer Service Centre or by an authorized service centre.
9. Do not place the appliance on or near a hot gas or electric burner, in a heated oven, or near easily flammable material.
10. Do not use outdoors or while standing in a damp area.
11. Do not use appliance for other than intended use. This appliance is intended for household use only.
12. Always place appliance on a flat sturdy surface. When moving appliance, always take precaution not to touch hot surfaces.
13. Use of accessories or equipments not supplied by the manufacturer may cause damage or result in the malfunctioning of your appliance or bodily injuries.
14. Children being supervised not to play with the appliance.
15. Only authorized service personnel allowed to undertake repairs on electrical appliances. Repairs undertaken by unauthorized persons may result in damage to the appliance and/or accidents or injury to the user.

How to Use Your Appliance

Using for the first time:

1. Remove all packaging from the appliance before use.

2. Check that the non-stick coating plate is free from dust. Wipe the surface of the plates with a damp cloth and dry with a cloth or kitchen towel.

3. Before using your appliance for the first time, the non-stick coating plate must be seasoned during the preheating time to protect the non-stick surface.

How to Use:

1. Connect the snack grill to power outlet.

2. Pre-heat the snack grill 3-5 minutes, then season the non-stick coating plate by applying a thin coat of cooking oil, butter or margarine to the cooking surfaces and rub in with a paper towel. Exercise care, as the cooking plates will be hot!!

3. Fill of the non-stick coating plate with the mixture ingredients.

4. For best result, cook until golden then use a stick to flip over the snack start from the left, turn into a circular shape and turn it on evenly.

5. When cooking is done, remove the snack and place it into a plate.

6. When cooking completed, turn off the power switch and remove the plug from the wall socket.

RECIPE OF SIMPLE TAKOYAKI (For reference only)

Ingredients A :

200gm Flour	1 tsp Dashi powder
600gm Cold water	1 tsp Baking powder
3 Eggs	1 tsp Salt
(Ajinomoto) or any fish/ Seafood seasoning powder/ Granules, Whisk all together.	

Method

1. Whisk all together the ingredients A.
2. Pour onto pre-heated and lightly oiled Trio Snack Grill, add sliced seafood (prawn slice/ octopus slice/ fish).
3. Add in some sliced green onion or parsley.
4. Add in small cube of cheese (optional).
5. Explore with any filling of your choice but must be in small bits.
6. For best result, cook until golden then use a stick to flip over the snack start from the left, turn into a circular shape and turn it on evenly.
7. Serve with mayonnaise and / or teriyaki sauce and bonito flakes.

Care and Cleaning

1. Always unplug the appliance after use and allow the appliance to cool down completely.

2. Wipe the exterior surfaces and internal with a damp cloth. Do not flush the whole appliance with water.

3. Do not use abrasive sponge, scouring pads or stiff brush to clean the appliance. The baking plate may be cleaned with mild soapy water using a sponge or soft cloth.

4. Do not clean with abrasive cleaning agents such as detergent, gasoline or turpentine.



This marking indicates that this product should not be disposed with other household wastes throughout the nation. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

TRIO®

Cuisine

