
TRIO® Cuisine


SNACK MAKER

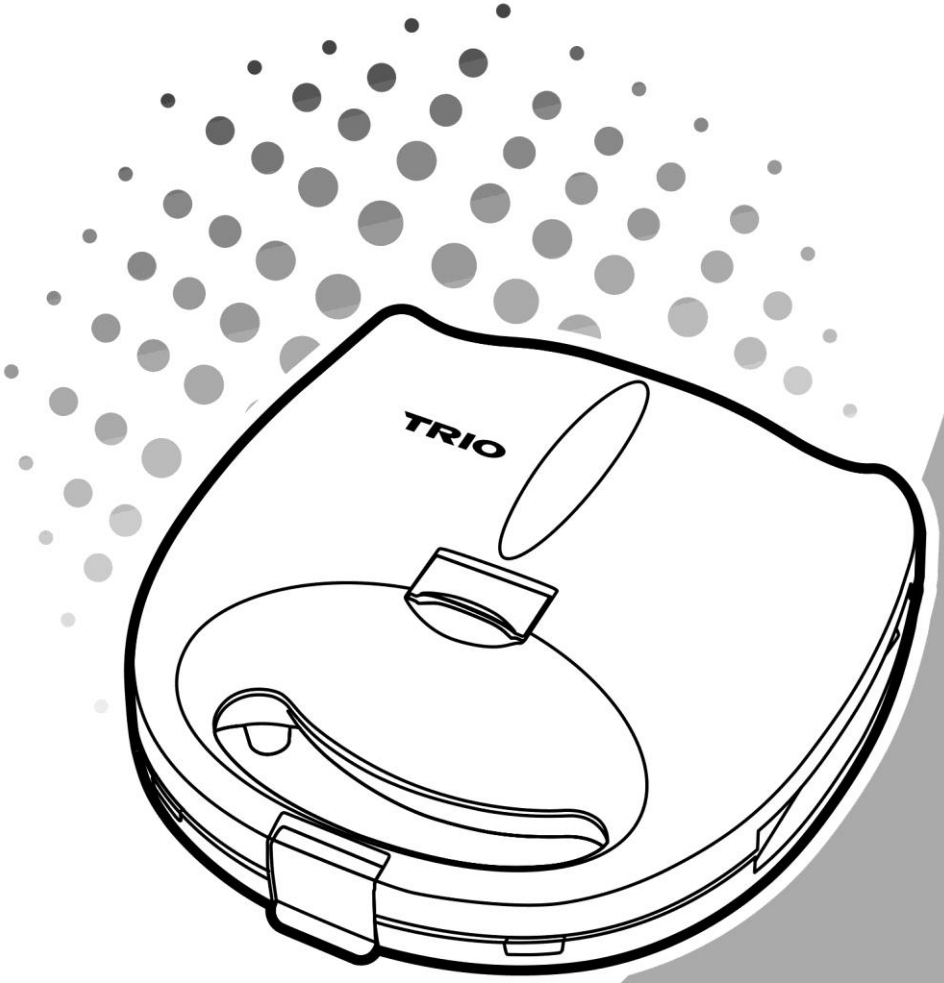

USER MANUAL

TSM-268

Parts Identification

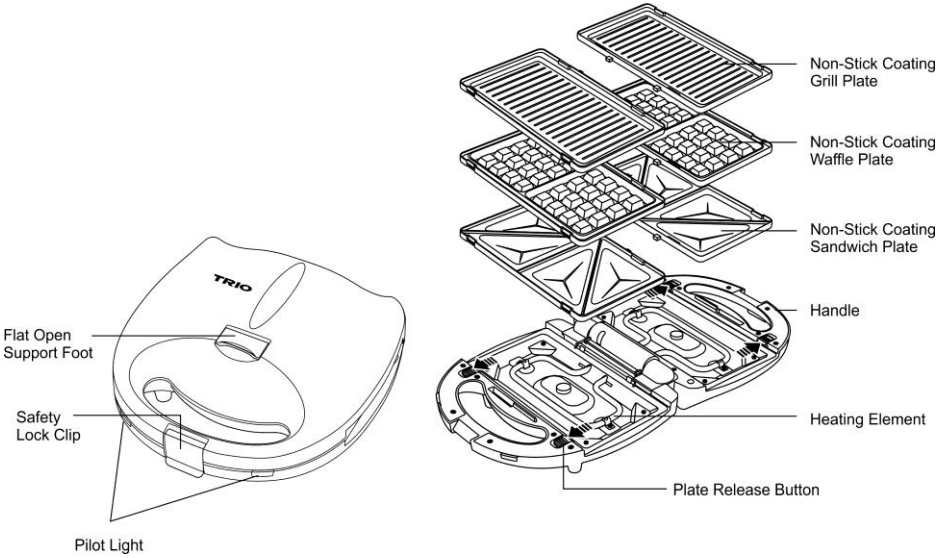

Specifications

Model	**TSM-268**
Rated Voltage	**220-240V~**
Frequency	**50-60Hz**
Rated Wattage	**800W**

General Safety Precautions

1. Please read these instructions carefully before operating and keep it for future reference.
2. This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by person responsible for their safety.
3. Always switch off and unplug the appliance from the mains electricity supply BEFORE cleaning and also when the appliance is not in use.
4. Never immerse the appliance, cord or plug into water or any other liquid to avoid damage and other hazards.
5. Close supervision is necessary when appliance is used by or near children.
6. Ensure the electrical cord does not hang over the work surface.
7. Do not leave appliance unattended when plugged in. Switch off the mains electricity supply when appliance is not in use.
8. Do not operate the appliance with a damaged cord set, or plug. Any repairs should always be carried out by the Customer Service Centre or by an authorized service centre.
9. Do not place the appliance on or near a hot gas or electric burner, in a heated oven, or near easily flammable material.
10. Do not use outdoors or while standing in a damp area.
11. Do not use appliance for other than intended use. This appliance is intended for household use only.
12. Always place appliance on a flat sturdy surface. When moving appliance, always take precaution not to touch hot surfaces.
13. Use of accessories or equipments not supplied by the manufacturer may cause damage or result in the malfunctioning of your appliance or bodily injuries.
14. Children being supervised not to play with the appliance.
15. Only authorized service personnel allowed to undertake repairs on electrical appliances. Repairs undertaken by unauthorized persons may result in damage to the appliance and/or accidents or injury to the user.

How to Use Your Appliance

Using for the first time:

1. Remove all packaging from the appliance before use.

2. Check that the non-stick coating plate is free from dust. Wipe the surface of the plates with a damp cloth and dry with a cloth or kitchen towel.

3. Before using your appliance for the first time, the non-stick coating plate must be seasoned during the preheating time to protect the non-stick surface.

4. Pre-heat the snack grill 3-5 minutes, then season the non-stick coating plate by applying a thin coat of cooking oil, butter or margarine to the cooking surfaces and rub in with a paper towel. Exercise care, as the cooking plates will be hot!!

Operation:

Your snack maker can be used in two positions.

1. In the normal closed position with non-stick coating sandwich plate and non-stick coating waffle plate for making sandwich and waffle.

2. Opened flat with non-stick coating grill plate as a griddle for patties, pikelets and many more foods.

To change the plates:

1. Make sure the plates are cool before starting to change.

2. Remove the plug from the power supply.

3. To remove the plates already in the snack maker, press down the plate release buttons and then remove the plates by lifting up the plate handles.

4. Put the locating tabs of the new plate into the tab slots near the hinge.

5. Push down the plate handles until the plate clicks into place.

6. Do the same on the other plate.

To open flat as a griddle

1. Lift the flat open support foot which is on the cover into the upright position.

2. Open the lid of the snack maker to the normally open position (just past upright). Lift the handle a litter further. This opens the floating hinge and allows the lid to be laid down into opened flat position.

To make toaster sandwiches

1. Close the lid of the snack maker.

2. Plug the appliance into power supply. The red light will glow indicating that the power is on. Which the green light glow indicating that the heating tube is heating.

3. Whilst the snack maker is heating prepare the bread and filling.

4. When the green light goes out, this indicates that the snack maker has reached operating temperature and the sandwiches can be put in to start toasting. The green light will turn off as cooking progresses, then the light up again when the temperature drops.

5. Allow the sandwich to toast for 3-5 minutes according to taste and ensuring that raw ingredients are thoroughly cooked, alternatively, pre-heating before toasting.

6. Open the snack maker in one swift movement and remove the toasted sandwiches. Do not use a metal implement for this as it may damage the toasting plates.

7. After use, unplug the appliance and allow it to cool down.

To make toaster waffles

1. Plug the appliance into the power supply. The red light will glow indicates that the power is on. Which the green light glow indicating that the heating tube is heating.
2. Pre-heat the snack maker for 2-3 minutes, then season the non-stick coating waffle plate by applying a thin coat of oil or butter to the baking surfaces and rubbing in with a paper towel. Be caution, the baking plate's surface is hot.
3. When the green light goes out, this indicates that the snack maker has reached operating temperature. Open the snack maker in one swift and pour approximately waffle batter into grids to start toasting. The green light will turn off as cooking progresses, then light up again when the temperature drops.
4. Allow the waffle to toast for 5-8 minutes according to taste and ensure that raw ingredients are thoroughly cooked.
5. Open the snack maker in one swift movement and remove the toasted waffle. Do not use a metal implement for this as it may damage the toasting plates.
6. After use, unplug the appliance and allow it to cool down.

Recipe

2 eggs	1 tablespoons white sugar
2 cups all-purpose flour	4 teaspoons baking powder
1 ¾ cups milk	¼ teaspoon salt
½ cup vegetable oil	½ teaspoon vanilla extract

Method:

1. Preheat snack maker with non-stick coating waffle plate. Beat eggs in large bowl with hand beater until fluffy.
2. Beat in flour milk, vegetable oil, sugar, baking powder, salt and vanilla until smooth.
3. Pour batter onto hot non-stick coating waffle plate. Cook until golden brown. Serve hot.

Care and Cleaning

1. Always unplug the appliance after use and allow the appliance to cool down completely.

2. Wipe the exterior surfaces and internal with a damp cloth. Do not flush the whole appliance with water.

3. Do not use abrasive sponge, scouring pads or stiff brush to clean the appliance. The baking plate may be cleaned with mild soapy water using a sponge or soft cloth.

4. Do not clean with abrasive cleaning agents such as detergent, gasoline or turpentine.



This marking indicates that this product should not be disposed with other household wastes throughout the nation. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

TRIO®

Cuisine

