
TRIO® Plancher

VACUUM CLEANER

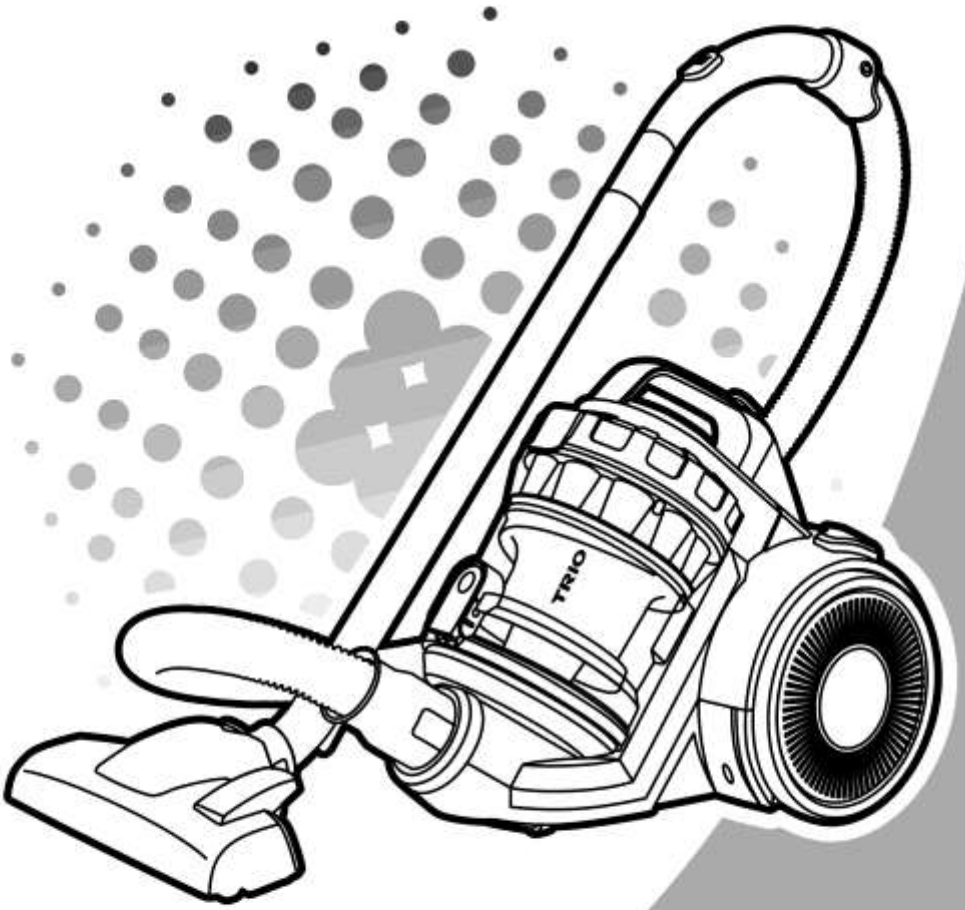

USER MANUAL

TVC-168

General Safety Precautions

1. Please read these instructions carefully before operating and keep it for future reference.
2. This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by person responsible for their safety.
3. Always switch off and unplug the appliance from the mains electricity supply BEFORE cleaning and also when the appliance is not in use.
4. Never immerse the appliance, cord or plug into water or any other liquid to avoid damage and other hazards.
5. Close supervision is necessary when appliance is used by or near children.
6. Ensure the electrical cord does not hang over the work surface.
7. Do not leave appliance unattended when plugged in. Switch off the mains electricity supply when appliance is not in use.
8. Do not operate the appliance with a damaged cord set, or plug. Any repairs should always be carried out by the Customer Service Centre or by an authorized service centre.
9. Do not place the appliance on or near a hot gas or electric burner, in a heated oven, or near easily flammable material.
10. Do not use outdoors or while standing in a damp area.
11. Do not use appliance for other than intended use. This appliance is intended for household use only.
12. Always place appliance on a flat sturdy surface. When moving appliance, always take precaution not to touch hot surfaces.
13. Use of accessories or equipment not supplied by the manufacturer may cause damage or result in the malfunctioning of your appliance or bodily injuries.
14. Children being supervised not to play with the appliance.
15. Only authorized service personnel allowed to undertake repairs on electrical appliances. Repairs undertaken by unauthorized persons may result in damage to the appliance and/or accidents or injury to the user.

16. Never vacuum water, wet objects, liquids, ashes, hot coals, cigarette butts, matches or any hot, smoking or burning objects.

17. Do not vacuum flammable or combustible materials (e.g. lighter fluid, petrol, kerosene, etc) or use in the presence of explosive liquids or vapors.

18. Due to fire and explosion risk, never vacuum toner (used in laser printer, copy machines, etc).

19. To prevent blocked filters, do not vacuum plaster and cement.

20. To prevent damage to the appliance, do not vacuum sharp and hard objects such as glass, pins, screws, etc.


21. In order to protect the motor from damage through overheating, do not operate the appliance if the air inlet and/or outlet vent are blocked.

22. Use only original accessories supplied.

Specifications

Model	**TVC-168**
Rated Voltage	**220-240V~**
Frequency	**50-60Hz**
Rated Wattage	**1400W**

Parts Identification

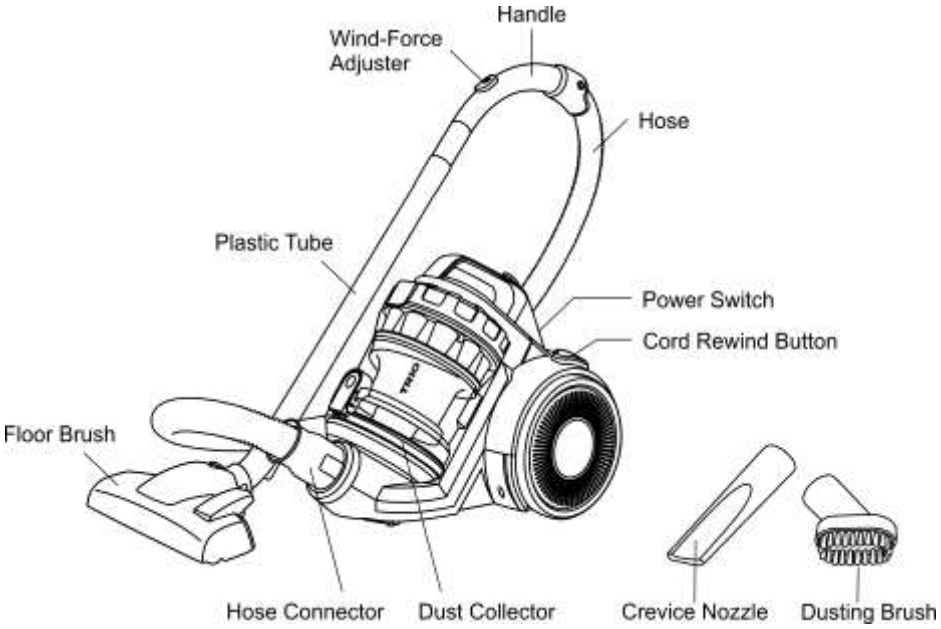

How to Assemble the Vacuum Cleaner




ASSEMBLY INSTRUCTION

Hose assembly: Insert the end of the hose into the front hose socket until it clicks into place.

Remove the hose: Press the button at the tube and pull the hose firmly out of the air intake duct.




Fitting the extension tubes and accessories

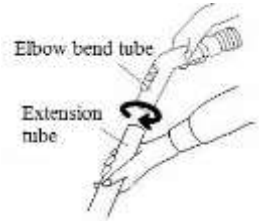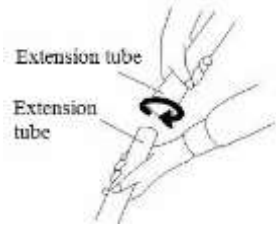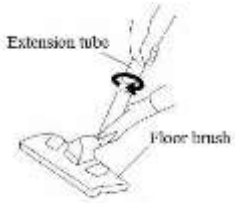Fitting the elbow bend tube to the extension tube.	Fitting the extension tubes together.	Fitting the accessories to the extension tube.
		


Using the cleaning accessories

Pos.1:Bristles extended for hard floors retracted for carpets.	Pos.2: Bristles retracted for carpets



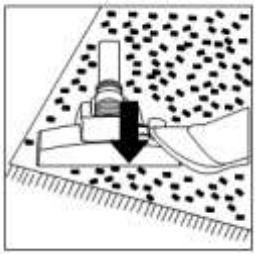

Narrow nozzle: Cleaning radiators, corners, edges, drawer and etc.	Small brash: Cleaning curtains, shelves, books, inlaid, furniture, lamp and other dedicate objects.

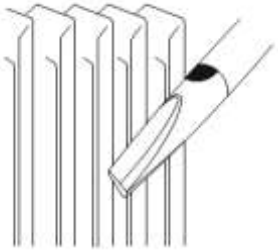




How to Use the Vacuum Cleaner

1. Before using the appliance, unwind the length of the cable and insert the plug into the power socket. Do not extend the cable beyond the RED mark.

2. To rewind the power cable、press the rewind button with one hand, and guide the other hand to ensure that it does not whip causing damage.

3. Press the ON/OFF button to switch the appliance on.

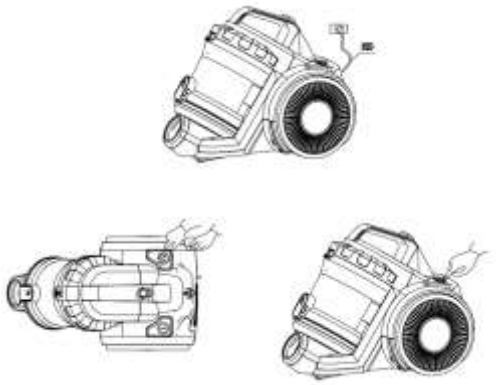

Care and Cleaning

1. Always unplug the appliance after use and allow the appliance to cool down completely.

2. Wipe the exterior surfaces and internal with a damp cloth. Do not flush the whole appliance with water.

3. Do not use abrasive sponge, scouring pads or stiff brush to clean the appliance.

4. Do not clean with abrasive cleaning agents such as detergent, gasoline or turpentine.

5. To maximize the cleaning performance, it's suggested to clean the filtration system after every 4-6 times of using.

Clean the Dust


1. Press the dust cup button and take out the dust cup.
2. Hold the dust cup and press the bottom dust collector release button to release the dirt & dust.






Clean the Foam

1. Take out the foam and clean it when it's fully covered with dust.
2. Remove the filter (if the filter is already dirty), turn clockwise to remove the net cover.
3. Clean it in the water. Dry thoroughly before storing.

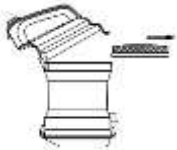

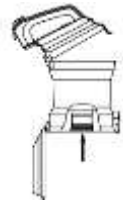







This marking indicates that this product should not be disposed with other household wastes throughout the nation. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

TRIO®

Plancher

