
TRIO *Cuisine*


WATER DISPENSER

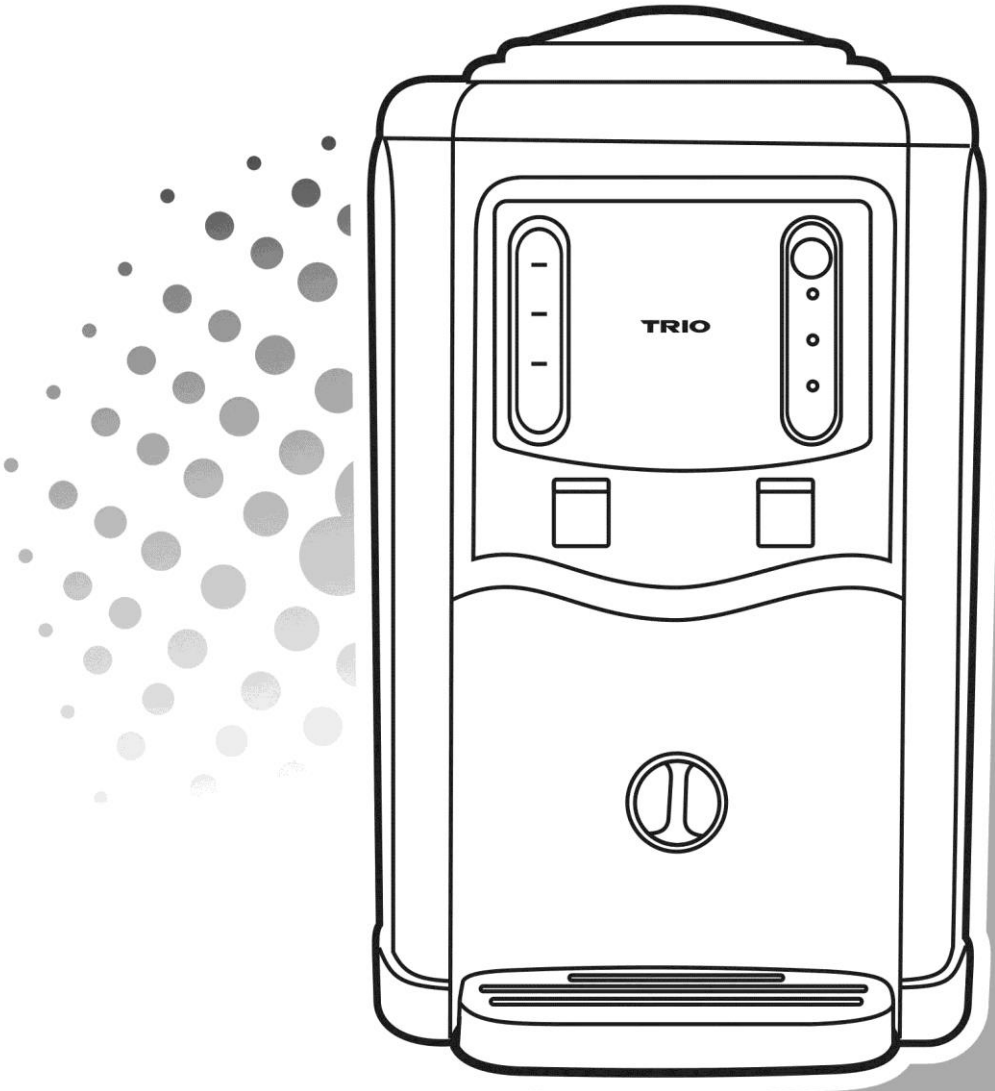

USER MANUAL

TWD-701

Parts Identification

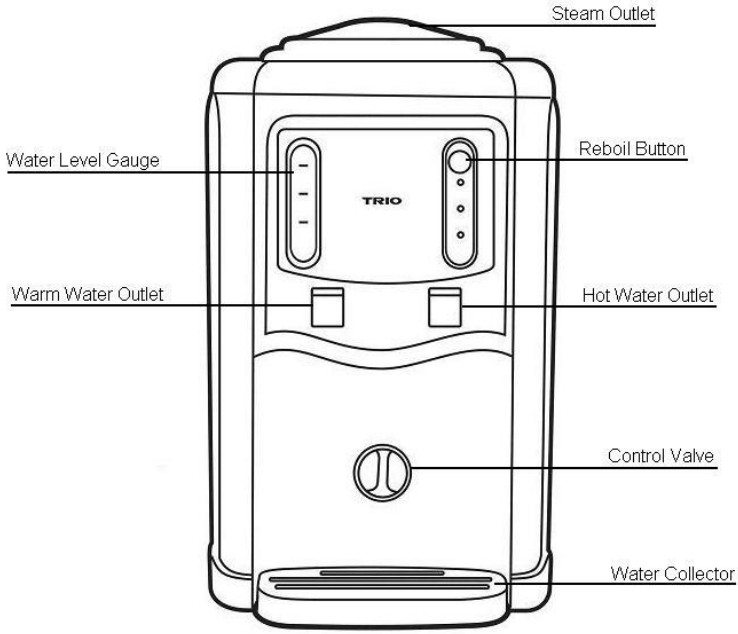

Specifications

Model	**TWD-701**
Rated Voltage	**220-240V~**
Rated Wattage	**700-800W**
Capacity	**7.0L**
Frequency	**50Hz**

General Safety Precautions

1. Don't modify the appliance. It should be repaired only by an authorized repair technician.

2. Don't soak or place the appliance in water, wet surface such as sink or allow it to be splashed.

3. Use only an electrical outlet rated at 15 ampere or more.

4. Keep the appliance out of the reach of infants. Don't allow children to use the appliance without supervision.

5. Don't add water above the full water guide mark.

6. Don't allow the pot to lit or fall over.

7. Don't place a cloth or any other items over the steam vent.

8. Don't close the upper lid forcefully.

9. Do not use the appliance if the electrical plug or power cord is damaged or the plug is loosely inserted into the electrical outlet.

10. Do not scratch damage, modify, forcefully bend, pull, twist or fold the power cord.

11. Do not place heavy items on power cord, allow it to be become pinched between objects, or modify it.

12. Don't carry the appliance in your arms, tilt or shake it.

13. Always place appliance on a flat sturdy surface. When moving appliance, always be aware not to touch the hot surface, or possible spillage of hot liquids it may contain.

14. Use of accessories or equipments not supplied by the manufacturer may cause damage or malfunctioning of your appliance or result in injuries.

How to Use Your Appliance

Before use for the first time:

- Turn the control valve at “REFILL” position. Then add water until it reaches the “FULL” mark. Insert power cord and switch ON the mains, it will automatically start boiling.

- After the water boiled, turn the control valve at “POUR” position.

- The water level gauge will start dropping and wait until it stops dropping. Turn the control valve back to “REFILL” position.

- Press “WARM WATER” button to dispense the water until it finish.

- Switch OFF the power and disconnect the power cord from the appliance.

- Wait until the hot water’s temperature drop till room’s temperature; carefully release away the water from warm water tank into a sink, by remove a cap from water outlet at the bottom base. Put back the cap after water completely drained out.

- For the first time use, there might be an unpleasant odor, this is normal and it will get off over sometime.

- Now you can start using this appliance by following instructions.

How to Use

1. Turn the control valve to “REFILL” position; then add the water. Use only a **SEPARATE** container to add water.

2. Add water until it reaches the “FULL” mark; **CAUTIONS: DO NOT** ever add water exceeds this “FULL” mark as hot water will over flow from the dispenser during boiling.

3. Close the upper lid slowly after adding water to prevent water from splashing.

4. Ensure the external body of the appliances is dry especially the power connector. Then only connect the plug to the power supply and switch it ON and the “POWER” indicator light will turn ON.

5. The “BOILING” indicator light will turn ON automatically to show that the water is in the boiling process.

6. After the water is boiled, the “POWER” indicator light will go off. And the “KEEP WARM” indicator light will turn ON automatically.

7. Now turn the control valve to “POUR” position. The hot water will flow into the pre cooling tank for warm water usage. There won’t have warm water dispensing immediately as the hot water temperature only will drop in 2 hours; approximately 10-15°C and is very much depending on the room’s temperature.

8. At the same time the hot water in the water level gauge will drop. You may re fill the water again and turn the control valve to “REFILL” position and it will automatically start boiling again.

9. After the water fully boiled, the “KEEP WARM” light indicator will turn ON. Adjust the control valve to “POUR” position for HOT of WARM water dispensing purpose.

10. Dispensing HOT and WARM water:

    - Place your cup under the water spout and press “HOT WATER” button. Hot water will stop dispensing once you release pressing the button.

    - Place your cup under the water spout and press “WARM WATER” button. Warm water will stop dispensing once you release pressing the button.

    - Dispensing WARM WATER is allowed during boiling process.

    - **NOTE:** Warm water is pumped from the hot water container. Hence, you are advice to refill the water into hot water container when water level gauge reaches “EMPTY”. Otherwise, you are unable to dispense water when water is in “EMPTY” level.

    - **CAUTION: DO NOT** dispense HOT WATER during boiling process as those not boiled water may harmful to your health.

11. Control Valve's Position:

    - REFILL: During add water and boiling process. This is to prevent the not boiled water flow into the warm water container.

    - POUR: Must ensure the water is fully boiled as the hot water will automatically replenish the warm water container under this position.

12. Water level gauge will show the actual HOT water level in the internal pot.

13. Once the water level is reaching the minimum level, refill the water immediately to prevent dry boiling. Always remember to adjust the control valve at "REFILL" position during refill water and boiling process.

Caution for Water Dispenser

1) Do not remove the lid while boiling water.

2) Beware of the hot surface on the inner side of the lid.

3) Do not pump the water while it is boiling.

4) Do not rotate the pot while pumping the water.

5) Do not block the steam vent.

6) Do not fill the water more than the "FULL" mark line to prevent any damage or malfunction.

7) Use clean filtered water. Contaminated water can cause oxidation to the tank.

8) Do not connect power if water level does not reach the minimum level. Otherwise, it may cause dry boiling and malfunction on the appliances.

9) When the water is already set to the BOILING mode, do not open lid to add or pour out water. Switch OFF the thermo pot and start the filling process after about 5 minutes.

Care and Cleaning

- Remove the plug before cleaning.
- Pour away the remaining hot water and let the appliance cool down completely before clean.
- Wipe with clean damp cloth. Do not flush the whole thermo pot with water.
- Do not clean with abrasive detergent, gasoline or turpentine.
- Wipe the internal tank with clean damp cloth or with a soft sponge.
- Do not use any brush with hard bristles or with abrasive detergent.
- Remove the dirt on the outer body with soft fabric.
- After using for the long time, the impurities in water will accumulate and pollute the internal tank and block the water outlet.
- Please fill the lemon juice with water into the internal tank and boil it for 30 minutes. Gently wipe with soft wet sponge and drain out.
- Boil the water completely to clean the internal tank. Repeat this procedures if necessary.

TRIO

Cuisine

