
TRIO® Cuisine


# TRAVEL MULTI COOKER

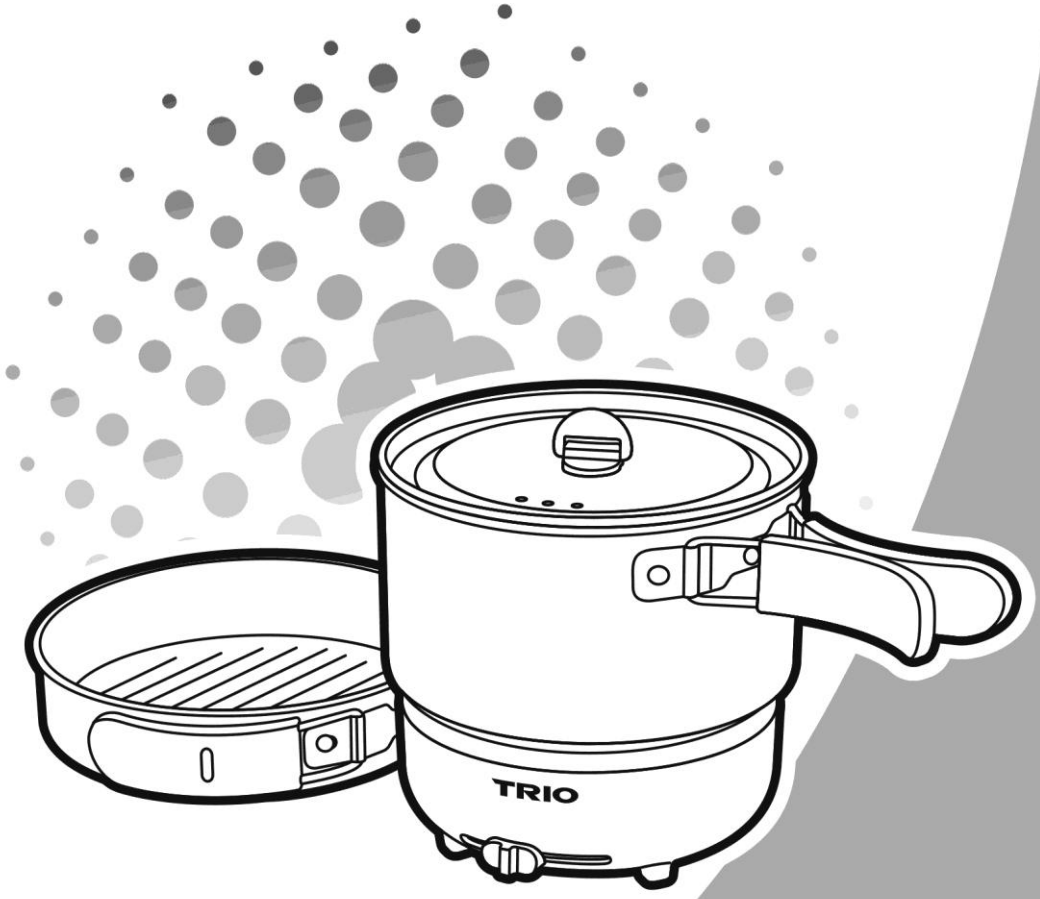


**USER** MANUAL

**TWH-003**

## Parts Identification

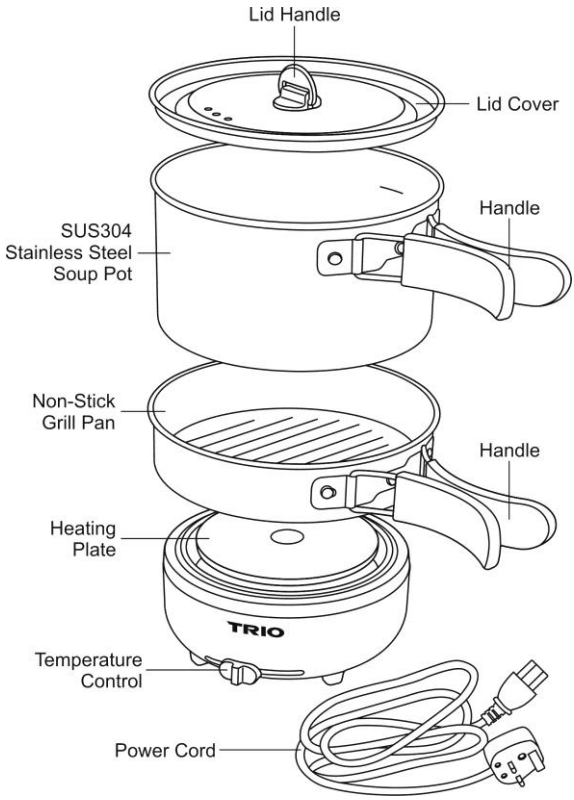


## Specifications

| | |
|---|---|
| Model | **TWH-003** |
| Rated Voltage | **220-240V~** |
| Rated Wattage | **500W** |
| Frequency | **50-60Hz** |
| Capacity | **1.5 L** |

# General Safety Precautions

1. Please read all instructions carefully before using the appliance.
2. Ensure the voltage indicated on the rating label corresponding to the local power supply.
3. Keep children away when appliance is in operation.
4. This appliance is suitable for normal household use only and not for commercial use.
5. Always operate the appliance on a flat level and dry working surface.
6. Do not hold the appliance at the slant while it is still in operation.
7. Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Return the appliance for examination, adjustments, or repair.
8. The use of attachments not recommended may cause fire, electrical shock, or risk of injury.
9. Unplug the unit when not in use and whenever you clean or move the unit.
10. To disconnect the appliance, set control to 'off', grip plug and pull from wall outlet. Don't yank an electrical cord from the wall.
11. Repairs an electrical appliance must only be done by authorized service personnel. Faultily, unqualified repair work may cause accidents or injury to the user.
12. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
13. This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by person responsible for their safety.
14. Children should be supervised to ensure that they do not play with the appliance.

# How to Use Your Appliance

**Before First Use**

1. Wash the stainless steel pot, lid cover and non-stick grill pan with mild soapy water. Then dry thoroughly before use.
2. Insert the connector into the connector inlet, followed by connecting the cooker to power outlet and switch it on.
3. A “trial run” at high temperature to eliminate any substance or oil that may be use for testing and packing. Smoke and odour may be detected and this is normal.

**How to Use**

1. This travel multi cooker has many functions. You may boiling water, cooking noodles, steamboat with the stainless steel soup pot and fried egg, sausage, stir fry with the non-stick grill pan.
2. Put the stainless steel soup pot or non-stick grill pan on the heating plate properly, placing it well on the heating plate. Otherwise, it may cause damage to the cooker.
3. Always keep the base of the heating element clean at all times. Should any crumbs and spills be accumulated on the heating element, clean after each use.
4. Slide the temperature control to “OFF” position.
5. Plug the power plug to the power outlet.
6. Always start any cooking function at the lowest setting and gradually increase the temperature to suit the food being cooked. The temperature setting is variable. Choose the best setting for your desired cooking results.
7. Always use a wooden spatula for stir frying or stirring so as not to damage the Non-stick grill pan.
8. When cooking is completed, slide the temperature setting control to “OFF” and unplug from power outlet.

# Care and Cleaning

- Before commencing cleaning, ensure that the mains electrical supply is switched OFF and the power cord is removed from the appliance. Wait until the appliance is at room temperature.

- The stainless steel soup pot and non-stick grill pan can be washed under tap running water.


- Do not hard-scrub the non-stick grill pan as it may damage the non-stick coating.

- Never immerse the appliance into water or any other liquids.

- Occasionally wipe the exterior surface with a mild and damp cloth. Never use a corrosive cleaner.

- Dry thoroughly before storing.

**Storage method**

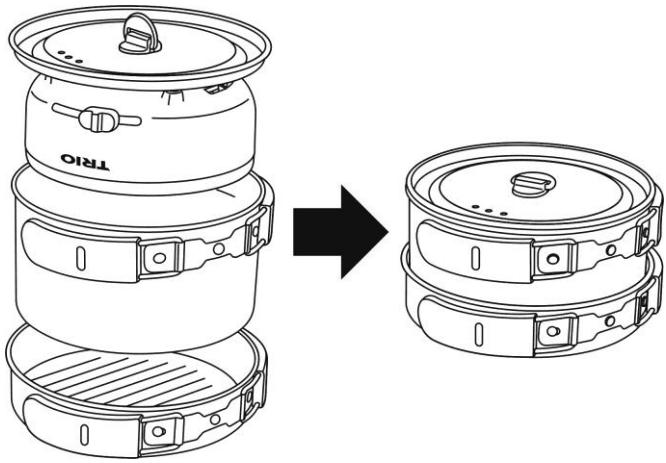

**Descaling**

When using tap water to boil water or cook food, it is normal to see some white scale spots at the bottom of the inner pot.

This is due to crystallization of the mineral impurities contained in the tap water when heated to high temperature.

The white spots can be cleaned using citric acid, edible vinegar or stainless steel cleaning agents.

**In order to descale, it is necessary to do as follows:**

1. Pour a cup of white vinegar (about 50ml) into the stainless steel soup pot, add water to the “MAX” mark.

   **Note:** Do not use abrasive cleaning agents and solvents.

2. Plug in the power cord and connect to the mains electrical supply.

3. Slide the temperature control to “High” position to start operating. Slide the temperature to “OFF” after water is boiled.

4. Disconnect the power supply and unplug the power cord. Wait until the appliance completely cools down. Then wipe off scale with damp cloth and discard the vinegar and thoroughly rinse the stainless steel pot with cold water to remove remaining vinegar.

   **Note:** Carefully empty the inner pot, making sure no liquid gets into power cord connector.



This marking indicates that this product should not be disposed with other household wastes throughout the nation. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

TRIO®

*Cuisine*

