
TRIO Cuisine

WAFFLE MAKER

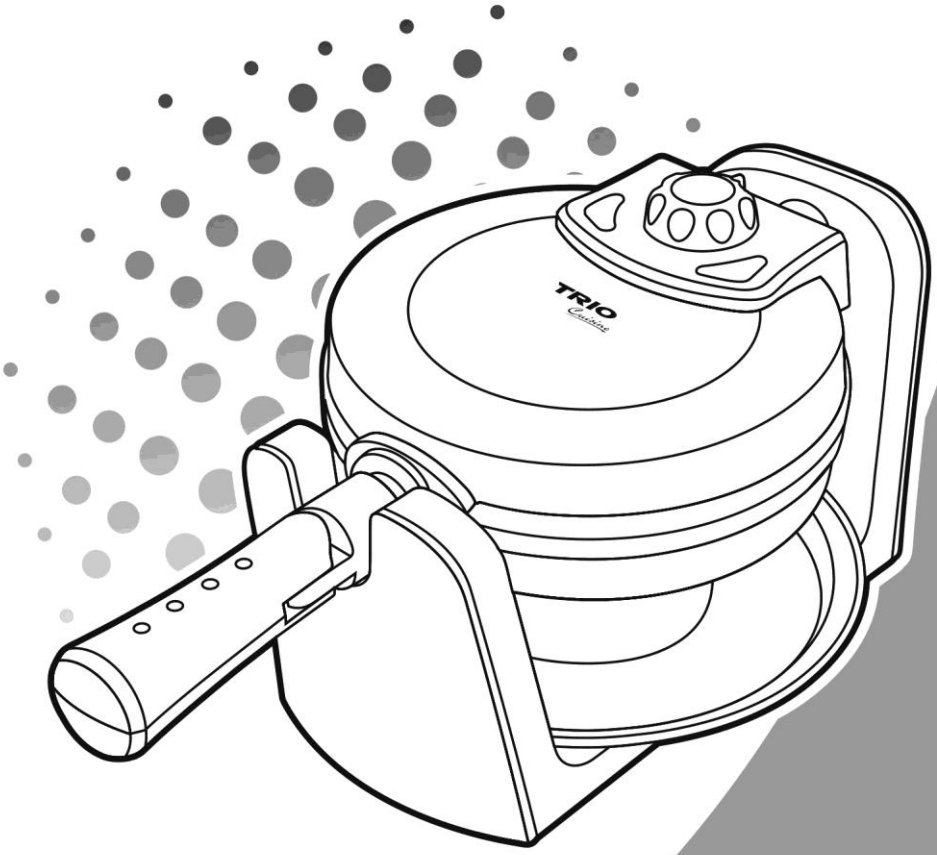

USER MANUAL

TWM-85

General Safety Precautions

1. Always switch off and unplug the appliance from the Mains electrical supply **BEFORE** cleaning and also when the appliance is not in used.

2. **NEVER IMMERSE THE APPLIANCE, POWER CORD OR PLUG INTO WATER OR OTHER LIQUID**. See instructions for cleaning.

3. Close supervision is needed when operating appliance near children.

4. This product must not be left unattended while it is connected to the main supply.

5. Always connect the power cord to the appliance BEFORE you plug in to the Mains electrical supply. To disconnect the appliance, switch off the Mains electrical supply before removing the plug from the appliance.

6. Do not operate appliances with damaged cord set, or plug. Any repairs should always be done by the Customer Service Centre or by an authorized service centre.

7. Do not place the appliance on or near a hot gas or electric burner, in a heated oven, or near easily flammable material.


8. Do not use in outdoor or while standing in a damp area.

9. Do not use appliance for other than its intended use. This appliance is intended for household use only.

10. Always place appliance on a flat sturdy surface. When moving appliance, always be aware not to touch the hot surface.

11. Use of accessories or equipments not supplied by the manufacturer may cause damage or malfunctioning of your appliance or result in injuries.

Parts Identification

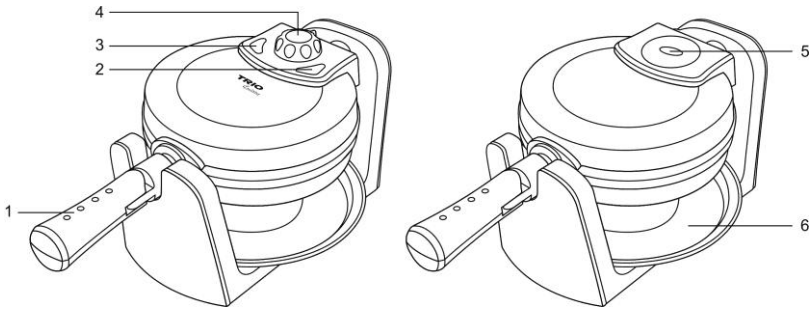

1. Folding Handle
2. Green Ready Light
3. Red Power Light
4. Temperature Control Knob
5. Green Ready Light
6. Removable Drip Tray

Specifications

MODEL	**TWM-85**
RATED VOLTAGE	**220-240V~**
RATED WATTAGE	**1000W**
FREQUENCY	**50/60Hz**

Before The First Use

- Remove all packaging materials.
- Clean the baking plates with a damp cloth or sponge.
- Slightly grease the baking plates with a little cooking oil.
- Take care to prevent water from running into the appliance.

Operating Instructions

Pre-heating

- Insert the plug into the main power supply, and then switch ON the appliance. You will see the red power light is switched on, it will constantly remain ON until you unplug the unit.
- Select the temperature to your desired.

  Please note: the results (browning, crispiness) depend on the baking temperature as well as the duration of the baking and quality of the batter!
- Always kept in closed position to allow the appliance to pre-heat for about 3 minutes. When the green light goes on, the appliance is ready for use.
- Apply some butter or oil to the surface of the hotplates using a brush.

Baking

- Open unit and pour approximately waffle batter into grids. Use spatula to spread the batter into the corners of grid. Meantime the green light will go OFF as the baking cycle begins. Close cover and rotated clockwise to 180°. It is very typical to have a small amount of batter run over arid and down unit. If happened use less batter.
- Do not open the cover. Opening too soon will cause unbaked waffles to split, and make them difficult to remove. Most waffle recipes bake in approximately 3 minutes.


- To remove waffles, always use a plastic or wooden spatula. Never use a sharp object or metal, as this will damage the non-stick surface of cooking plates.
- When baking is completed, simply turn off and unplug from the wall outlet

Recipe

- 2 eggs
- 2 cups all-purpose flour
- 1 3/4 cups milk
- 1/2 cup vegetable oil
- 1 tablespoon white sugar
- 4 teaspoons baking powder
- 1/4 teaspoon salt
- 1/2 teaspoon vanilla extract

Care and Cleaning

- Always allow your appliance to cool completely before cleaning.
- Wipe the inside and the edges of the plate with a soft cloth.
- Should any filling be difficult to remove, pour a small amount of cooking oil onto the plate and wipe off after 5 minutes when the food has softened.
- Wipe the outside with only a slightly damp cloth ensuring that no oil or grease enters the heating slots.
- Do not clean the inside or outside with any abrasive scouring pad or steel wool as this will damage the finish.

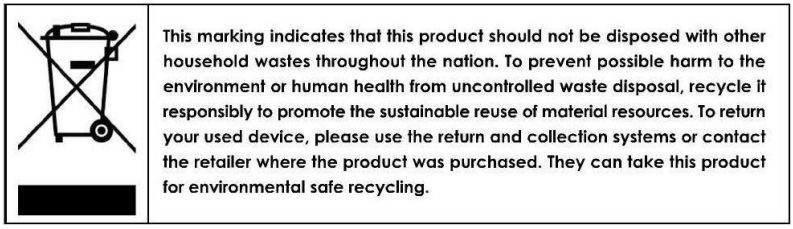

This marking indicates that this product should not be disposed with other household wastes throughout the nation. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

TRIO

Cuisine

