

TRIO Cuisine

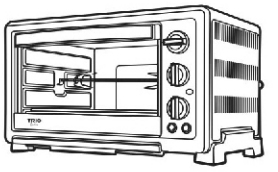

TRIO Cuisine

ELECTRIC OVEN

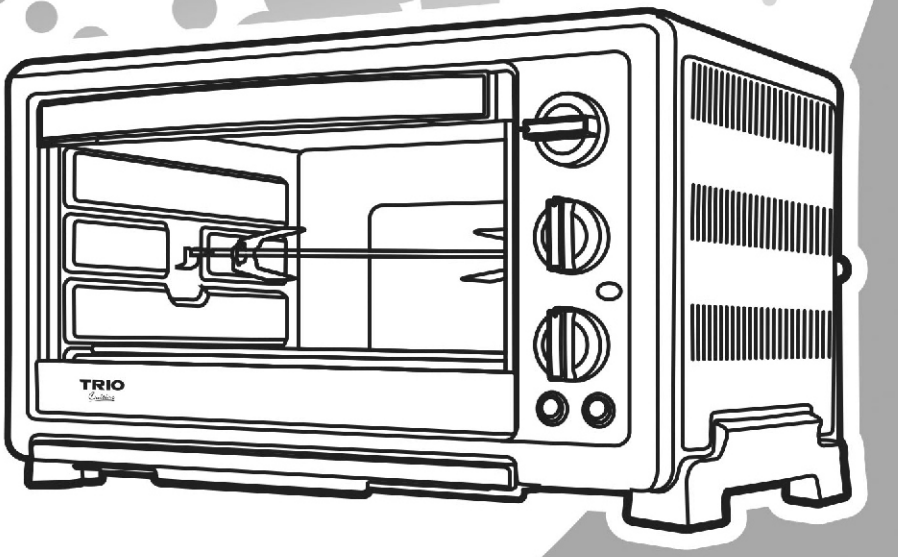


USER MANUAL

TEO-482

Specifications

Rated Voltage	**220-240V~**
Rated Wattage	**1800W**
Capacity	**48L**
Frequency	**50Hz**

Parts Identification

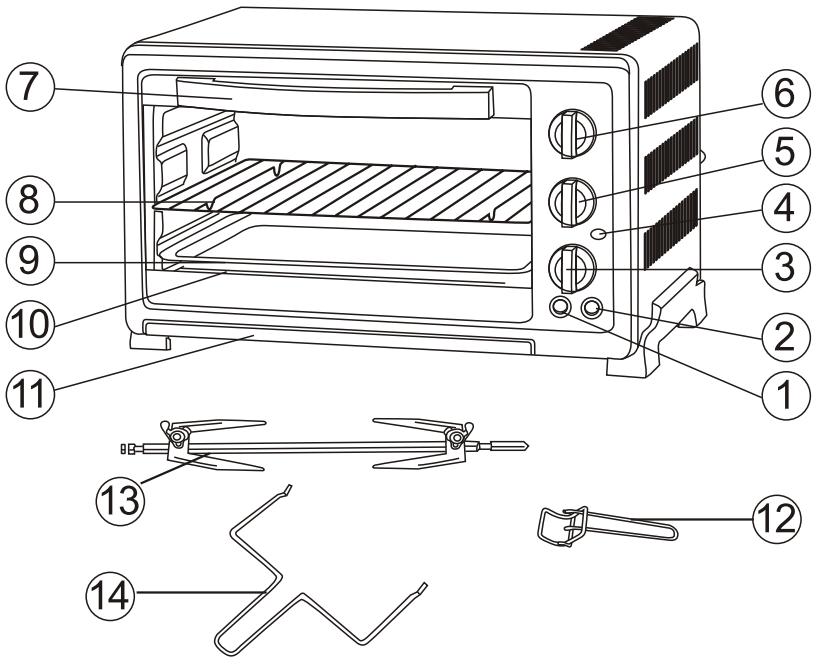

1.Rotisserie button
2. Convection button
3. Timer knob
4. Power indicator light
5. Heater selector knob
6. Temperature selector knob
7. Door handle
8. Wire rack
9. Bake tray
10. Heating elements
11. Crumb tray
12. Tray handle
13. Rotisserie sets
14. Rotisserie handle

General Safety Precautions

Please read these instructions carefully before use.

1. The oven needs at least 10cm space on all side and at least 30cm space on top to allow adequate air circulation.
2. Always switch off and unplug the appliance from the main electrical supply **BEFORE** cleaning and when not in use.
3. Never immerse the appliance in water or other liquids to avoid damage and other hazards.
4. Never leave the appliance unattended while it is connected to the mains.
5. Ensure the electrical cord does not hang over the work surface.
6. Do not operate the appliance with a damage cord set, or plug. Any repairs should always be carried out by our **Customer Service Centre** or by an **Authorised Service Centre.**
7. Do not place the appliance on or near a hot gas or electric burner, in a hater oven or near easily flammable materials.
8. Always place appliance on a flat sturdy surface. When moving appliance, always take precaution not to touch hot surfaces. Be cautious when moving an appliance containing hot liquids.
9. Used of accessories or equipments not supplied by the manufacturer may cause damage or result in the malfun-ctioning of your appliance or bodily injuries.
10. Do not splash water onto the glass window during or immediately after use. It may cause the glass to break.
11. When cooking oil-spalshing dishes such as roast chicken, it is recommended to put 2 sheets of aluminium foils on a tray in order to diminish oil splashing. Put one on a tray. Then oil will drip to a gap between foils.
12. Do not attempt to dislodge food particles when the appliance is still pluggged into an electrical outlet.
13. This appliance is intended for **HOUSEHOLD USE ONLY.**

How to Use Your Appliance

Before using the oven for the first time:

1. Wash all the oven accessories with mild dish detergent rinse thoroughly with clean water. Dry all accessories thoroughly and reassemble in the oven.
2. Heat up the oven at MAX temperature for approximately 15 minutes to eliminate packing odour that may remain after shipping.

USING YOUR OVEN

HELPFUL HINTS

In general ,it is not necessary to preheat the oven .You may have better results if you
Heat the oven before cooking some delicate meals ,such as rare medium meat and cakes .

HOW TO BAKE

1. Place the removable grill into the desired position
2. Place the tray on the grill, close the oven door.
3. Turn the timer dial to the desired cooking time.
4. Turn the Heater Selector dial on the  position.
5. Turn the Temperature Selector dial for the desired temperature.
6. When finished baking ,turn the Timer Selector dial till position"0", to switch off the oven

HOW TO BROIL

1. Insert the removable grill with food and the all-purpose pan
2. Keep the door half-open
3. Turn the Heater Selector dial to the position .
4. Turn the Temperature Selector dial to the desired temperature.
5. When finished broiling, turn the Timer Selector dial till position"0",to switch off the oven

HOW TO USE THE ROTISSERIE FUNCTION

1. Set the Temperature Seleetor to desire temperature.
2. Set the Heater Seleetor to □ON□. Inset the pointed end of SPIT through skewer , making sure the points of skewer face in the same direction as pointed end of the spit. Slide skewer towards square of the spit and secure with thumbscrew.
3. Place food to be cooked on the spit by running the spit directly through the Center of the food.
4. Place the second skewer into the other end of the roast of poultry and secure skewer with the thumbscrew.
5. Check the food is centered on the SPIT.
6. Insert the point end of the spit into the DRIVE SOCKET.. make sure the square end of the spit rests on the spit support.
7. Turn the Timer Selectr to the desired cooking time.
8. When complete, turn the Timer Seleetor till □O□ to switch off.
9. Remove the spit by placing the hooks of the rotisserie handle under the grooves on either side of the spit. Lift the left side of the spit first by lifting it up and out .Then pull the spit out of the drive socket and carefully remove the roast from the oven. Take the food off of the spit and place on cutting board or platter.

How To Use the CONVECTION Function

Arrange food on the wire rack or in the drip/baking pan.
Turn the OPERATION selector knob to the CONVECTION position.
Turn the TIMER selector knob to your desired cooking time.
Turn the TEMPERATURE control knob to the desired temperature.
The top and bottom heater elements will cycle and to maintain the selected temperature. At the same time the motor fan will operate.
Convection will keep a consistent temperature. The oven heats quickly, so preheating is not necessary or desirable. The fan circulates the hot air around the food making baked food rise quickly and evenly.
When CONVECTION is completed, turn the operation selector knob, function selector knob, temperature control knob and timer selector knob to the / "o"position, open door fully and remove food carefully, using the metal handling tool provided.

CLEANING

1. It is important that you clean the entire appliance after each use to prevent an accumulation of grease and avoid unpleasant odors.
2. Allow the appliance to cool and unplug form outlet before cleaning.
3. Do not immerse appliance in water or wash it under water-spout.
4. Removable grill ,tray, can be washed, as normal kitchenware.
5. Clean outside of appliance with a damp sponge.
6. Do not use abrasive cleaners or sharp utensils to clean the oven ,as it will scratch oven body.
7. Let all parts and surface dry thoroughly prior to operate the oven.